



ENGLISH

Control Software

for UPS with LAN-Ethernet Interface

User's Manual

Management Software for Uninterruptible Power Supply Systems



1.	View Power Overview	4
1.1.	Introduction	4
1.2.	Structure	4
1.3.	Features	5
2.	View Power Install and Uninstall	5
2.1.	System Requirements	5
2.2.	Software Instal	6
2.3.	Software Uninstall	9
3.	Service Tray Application.	9
3.1.	Start Monitor.	9
3.2.	Stop Monitor.	9
3.3.	SNMP Manager.	9
3.4.	Configuration.	10
3.4.1.	Http s / Http.	10
3.4.2.	Port Modification.	10
3.4.3.	Software Upgrades.	10
3.4.4.	Configuration Saved.	11
3.5.	Https.	11
3.6.	Software Update.	12
3.7.	Open Monitor.	13
3.8.	Exit.	13
4.	ViewPower Pro GUI.	13
5.	ViewPower Pro Menu.	14
5.1.	Configuration.	14
5.1.1.	Password Setting.	14
5.1.2.	Group area.	14
5.1.3.	UPS setting.	16
5.1.4.	SMS.	17
5.1.5.	E-mail.	18
5.1.6.	Load configuration.	18
5.1.7.	Event action.	20
5.1.8.	Log setting.	21
5.1.9.	EMD Manager.	21
5.1.10.	Modbus communication setting.	23
5.2.	Schedule	24
5.2.1.	Scheduled on/off	24
5.2.2.	Scheduled battery self-test.	24
5.2.3.	Wake on LAN schedule.	25
5.3.	View.	26
5.3.1.	Centralized monitoring.	26
5.3.2.	History.	34
5.4.	Format.	38
5.4.1.	Temperature Unit.	38
5.4.2.	Date Format.	38




5.5.	Language.	39
5.6.	Help.	39
5.6.1.	About.	39
5.6.2.	Online help.	39
	SNMP Manager. User Manual.	40
1.	Introduction.	40
2.	SNMP Manager Install, Quick Start and Uninstall.	40
2.1.	Software Installation.	40
2.2.	Software Quick Start.	40
2.3.	Software Uninstall.	41
3.	SNMP Manager UGI Interface.	41
3.1.	SNMP Device List.	41
3.1.1.	Scan.	41
3.1.2.	Add IP Address.	42
3.1.3.	Delete IP Address.	42
3.1.4.	Reset.	42
4.	SNMP Manager Function Menu.	45
4.1.	System.	45
4.1.1.	Login.	45
4.1.2.	Logout.	45
4.1.3.	Quit.	45
4.2.	Settings.	45
4.2.1.	IP Setting.	46
4.2.2.	Online upgrade.	48
4.2.3.	Password management.	50
4.2.4.	Static trap address.	51
5.	Language.	52
6.	Help.	52

1. View Power Pro Overview

1.1. Introduction

View Power Pro is UPS management software which is perfect for home users and enterprises. It can monitor and manage from one to multiple UPSs in a networked environment including LAN, INTERNET and RS485-based networks. Integrated with Shutdown Wizard, it can not only prevent data loss from power outage and safely shutdown systems, but also store programming data and scheduled shut down UPSs. All UPS working data and event records can be kept in local database system.

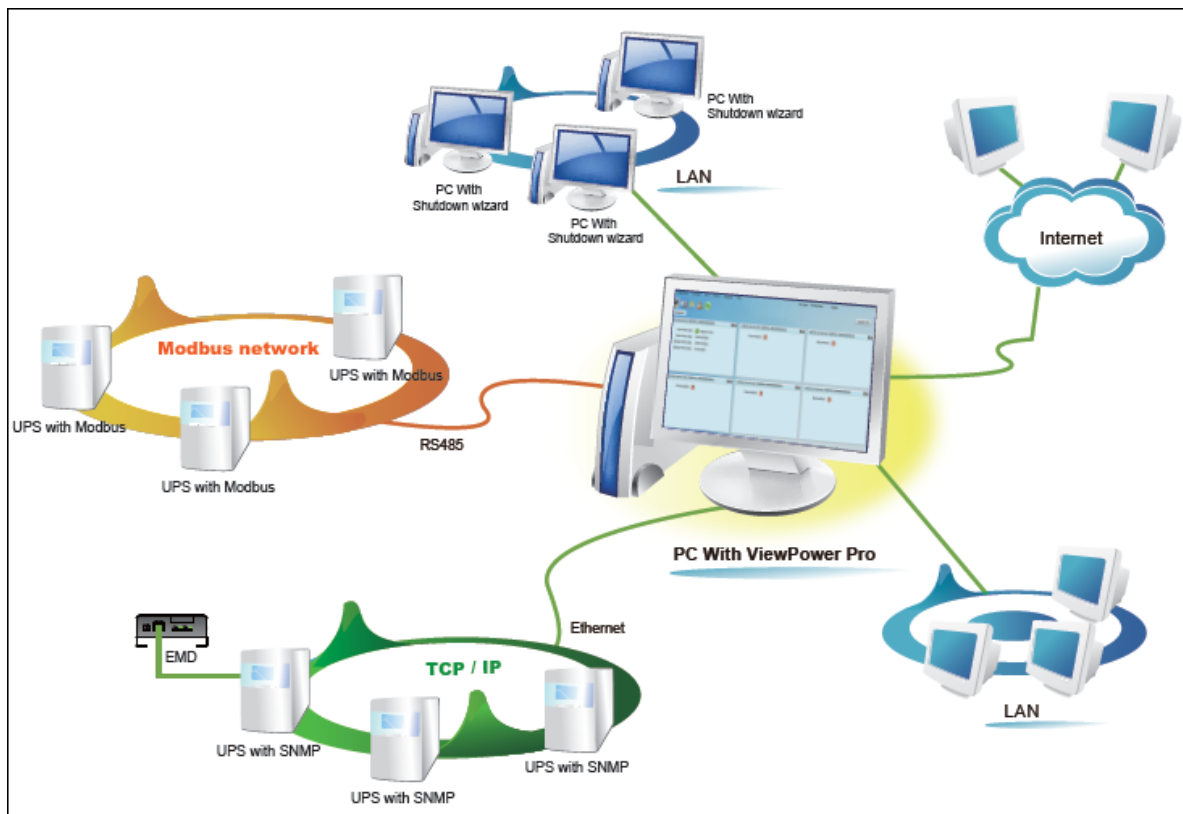

1.2. Structure

View Power Pro includes monitor service, WEB service and tray service.

- **Monitor service:** It is the core of View Power Pro software. Monitor service automatically find UPSs in the networks, store UPS working data and event information. It will communicate with UPS, record events, notify users with events, and execute command according to the users' request.
- **WEB service:** It offers Http or Https service for local or remote users. Users can manage and monitor UPSs for real-time status, information and modify UPS setting parameters via browser such as IE and Firefox.
- **Tray service:** It is management tool for View Power Pro software. It includes start monitor, stop monitor, SNMP manager and so on.

1.3. Features

- Centralized control and monitor up to 1000 UPSs via SNMP or Modbus networks.
- Offers WEB service to allow remote monitoring service via Intranet or Internet.
- Offers quick overview for UPS monitoring in Text and Graphic view.
- Offers user-customized background picture for graphic view with simple drag and drop.
- Scheduled UPS on/off, battery test, and scheduled wake on LAN programs.

2. View Power Pro Install and Uninstall

2.1. System requirement

- 1 GB physical memory at least (2 GB is recommended)
- 2 GB hard disk space at least
- Administrator authority is required
- More than 16-bit colors and 800 x 600 or above resolution display is recommended
- TCP/IP protocol must be installed for network management
- Platforms supported by software are listed below:
 - Windows 2000
 - Windows XP/2003/Vista/2008 (32-bit & x64-bit)
 - Windows 7(32-bit & x64-bit)
 - Linux Red Hat 8, 9
 - Linux Red Hat Enterprise AS3, AS5, AS6 (32-bit)
 - Linux SUSE 10 (32-bit)
 - Linux Cent OS 5.4 (32-bit)
 - Linux Ubuntu 8.X, 9.X, 10.X (32-bit)
 - Linux Fedora 5
 - Linux OpenSUSE 11.2 (32-bit)
 - Linux Debian 5.x, 6x (32-bit)
 - Mac OS 10.5 (x32-bit)
 - Mac OS 10.9 (x64-bit)
 - Solaris 10 for x86 (32-bit)

2.2. Software Install

Step 1 Insert the software CD into CD ROM. Installation menu will be automatically displayed, or you can run autorun.exe to start the installation in CD directory. Refer to the diagram 2-1.



Diagram 2-1

Step 2 It will show the following screen as Diagram 2-2. Then click "ViewPower Pro" button to start the installation.



Diagram 2-2

Step 3 After clicking install, it will display the installation in process. Refer to the diagram 2-3.

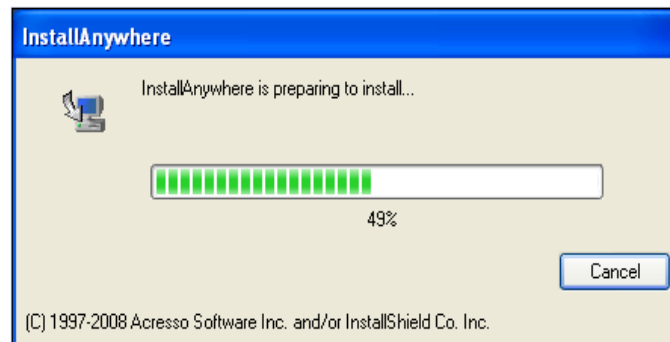


Diagram 2-3

Step 4 Choose wanted language and click "OK" as diagram 2-4.

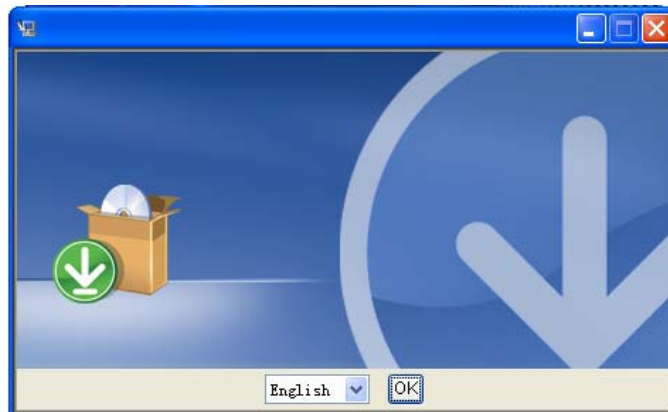


Diagram 2-4

Step 5 Click "Next" to proceed to the next screen as Diagram 2-5.

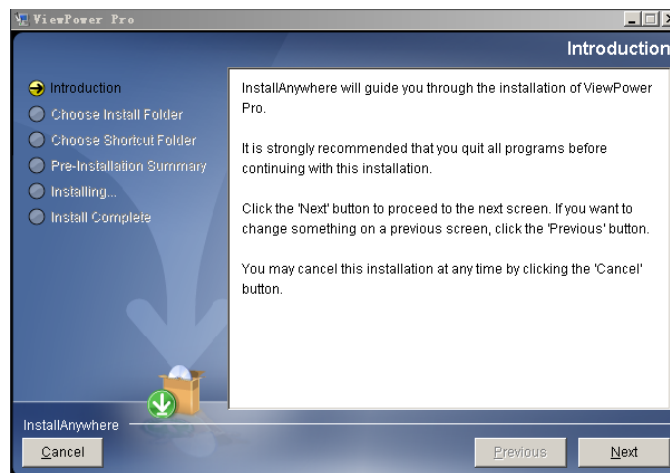


Diagram 2-5

Step 6 Click "Choose" button to change the default folder. After choosing the installed folder, click "Next" button. Refer to the following diagram 2-6.

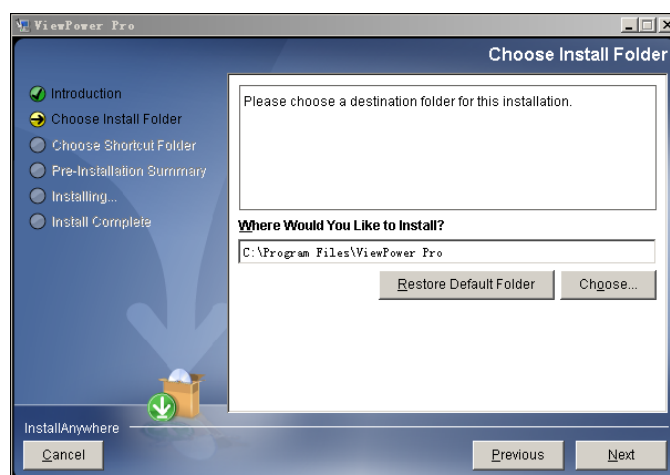


Diagram 2-6

Step 7 Choose the shortcut folder and click "Next" button. Refer to the following diagram 2-7.

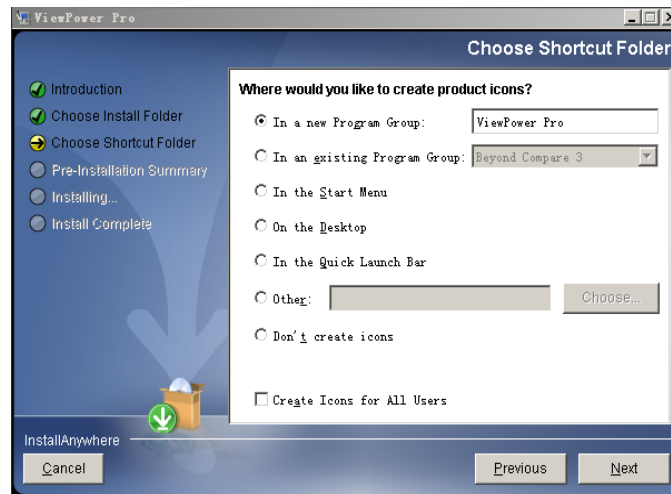


Diagram 2-7

Step 8 It will display the software summary before installation. Click "Install" button to start the installation and refer to Diagram 2-8.

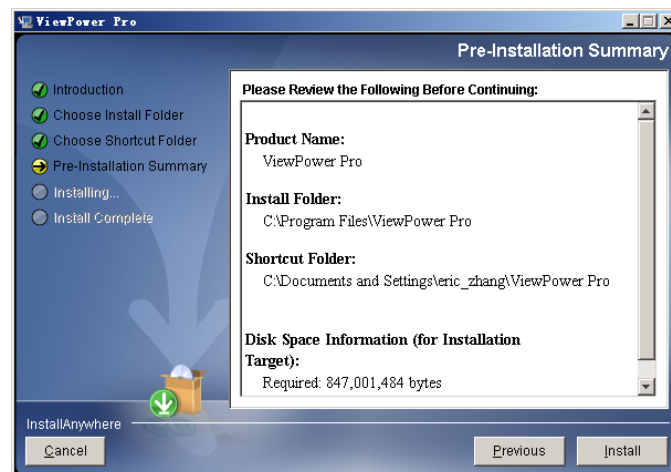


Diagram 2-8

Step 9 Click "Done" button to confirm the installation completely. Refer to Diagram 2-9.

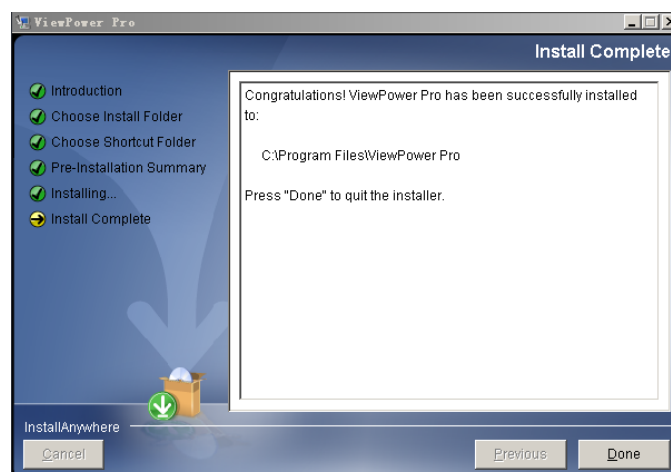


Diagram 2-9

Note: Please uninstall the previous version before install the new version software.

 
2.3. Software Uninstall

Please choose Start>>All Programs>>ViewPower Pro>>Uninstall. Then follow the on-screen instruction to uninstall the software. Before uninstall software, you must stop all software programs first and then log in as "Administrator"! Otherwise, it can't be uninstalled completely.

3. Service Tray Application

The Installer will leave a shortcut icon on your desktop. Simply click the shortcut. Then it will start the software and display an orange plug icon located in taskbar. To launch the GUI, double click the plug icon or choose "Open Monitor" by clicking right button of the mouse. Refer to below diagram.

Or, use the Start Menu method; Start>>All Programs>>ViewPower Pro>>ViewPower Pro.






3.1. Start Monitor

This software will be automatically activated when installing it as service application. At this time, users can remote monitor UPSs through web browser even though users do not login in operation system.

If service application can not be registered successfully, when starting up tray service, it will automatically activate monitoring application. If it's failed or stopped manually, simply click "Start Monitor" to activate it.

"Start Monitor" will check if monitoring application is registered as service application. If it's successfully, this software will be activated from service mode. If not, this software will be activated as monitoring mode. Users can identify the application mode from tray icon as below:

- Monitoring application is not activated successfully: 
- Monitoring application is activated as service mode: 
- Monitoring application is activated as monitoring mode: 

3.2. Stop Monitor

Click "Stop Monitor" to stop monitoring application.

3.3. SNMP Manager

Click the "SNMP Manager" to access the SNMP management tool. For details, please refer to "SNMP Manager User manual".

3.4. Configuration

3.4.1. Https/Http

Communication protocol: If choosing Https, "Https" selection will be accessible from tray menu. If communication port of Https is fixed in "18443", it's not allowed to use "port modification". At the same time, the URL of monitoring screen will become:

<https://xxx.xxx.xxx.xxx:18443/ViewPowerPro>

If choosing Http, "Https" selection will not be accessible and "port modification" function will become active status. Refer to section A in Diagram 3-1.

3.4.2. Port Modification

If port conflict occurs, you may modify value of port. The default setting for port is listed as below. Refer to section B in Diagram 3-1

- Web Service port: 15178
- Web service shutdown port: 8005
- AJP port: 8009

You may modify the value of port to any number between 0 and 65536. If value is applied already, the system will remind users to enter another number again.


NOTE 1: Please do not modify port value unless port conflict occurs. This modification will affect remote monitoring website. For example, if changing web service port to 15177, then the remote monitoring website will change to <http://xxx.xxx.xxx.xxx:15177/ViewPowerPro>

NOTE 2: To avoid possible conflicts, please be sure to enter value at least 4 digits.

3.4.3. Software Upgrades

Refer to section C in Diagram 3-1 for the detailed configuration for online upgrade:

- Specify the URL for update files: This is the directory to online update software. Please do not change it unless it's instructed by software vendor.
- Save files to: The directory to save files.
- Online auto-update: If selected, it will automatically check if there is any new version launched online every 1 hour.
- If applying online upgrade, please follow below for configuration:
 1. Select "Apply the proxy configuration";
 2. Enter IP address and port of server;
 3. If ID identification is requested, select "Enable authentication" and enter User Name and Password.
- Connection test: Click this button to test if all configurations are set up well.

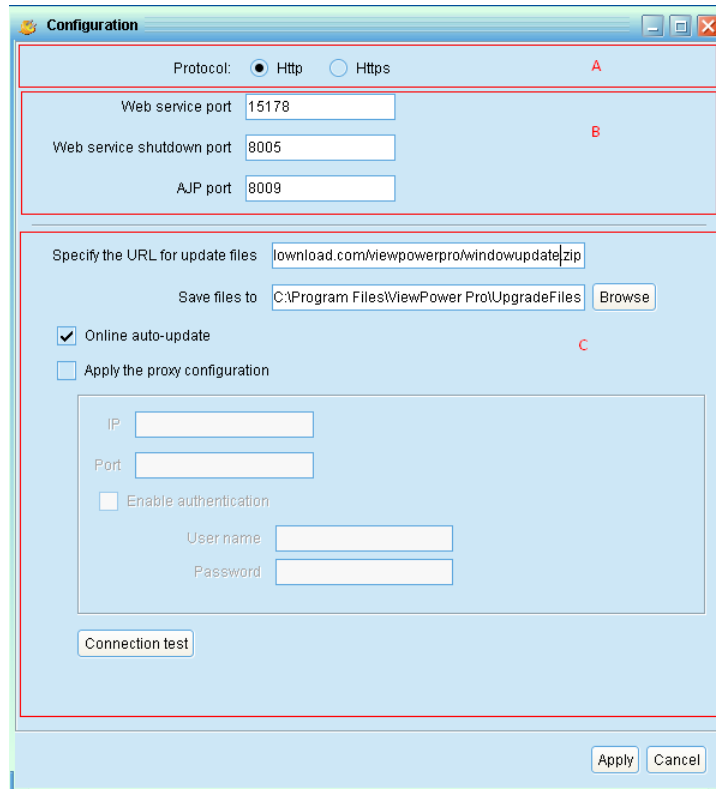

The Configuration window is divided into three main sections labeled A, B, and C.

Section A: Protocol selection. Radio buttons for **Http** (selected) and **Https**.

Section B: Port configuration. Text boxes for:

- Web service port: 15178
- Web service shutdown port: 8005
- AJP port: 8009

Section C: Update and proxy settings.

- Specify the URL for update files: download.com/viewpowerpro/windowupdate.zip
- Save files to: C:\Program Files\ViewPower Pro\UpgradeFiles (with a Browse button)
- ☒ Online auto-update
- ☐ Apply the proxy configuration
- Proxy settings (disabled):
 - IP: [text box]
 - Port: [text box]
 - ☐ Enable authentication
 - User name: [text box]
 - Password: [text box]
- Connection test: [button]

Buttons at the bottom: Apply, Cancel.

Diagram 3-1

3.4.4. Configuration Saved

Click "Apply" button to save all changes in Configuration page. Click "Cancel" to stop the change.

3.5. Https

Https section includes "Certificate Generation" and "Import Certificate".

- Certificate Generation: it will automatically generate a numeral certificate according to the information users enter. Refer to Diagram 3-2:



The Generate certificate window contains the following fields:

- First and last name: [text box]
- Organizational unit: [text box]
- Organization: [text box]
- City or Locality: [text box]
- State or Province: [text box]
- Two-letter country code for this unit: [text box]
- Password: [text box]

Buttons at the bottom: Apply, Cancel.

Diagram 3-2

Note 1: Please enter internet domain name and IP address in "First and last name" column.

Note 2: Password should be at least 6 characters in length.

- Import Certificate: It will import a https certificate from a third party. It supports JKS and PKCS12 types of certificate. Refer to Diagram 3-3.

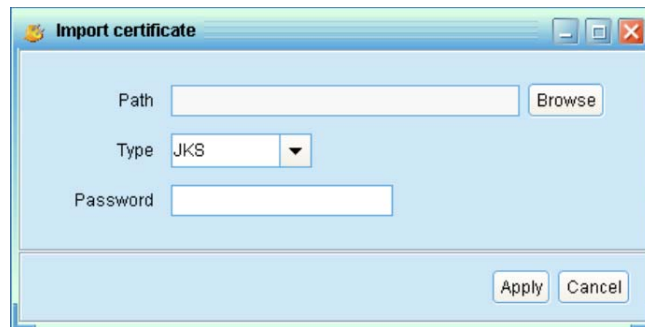


Diagram 3-3

3.6. Software Update

Software update includes Online Update and Manually Update:

- Online Update:

Click "Online Update" to search the latest software version. If there is new version detected, it will automatically download and update. Refer to Diagram 3-4.

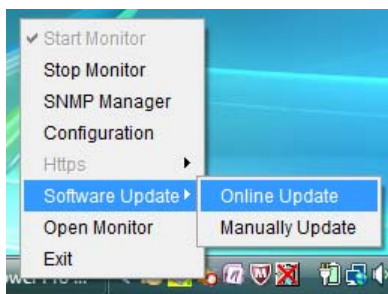


Diagram 3-4

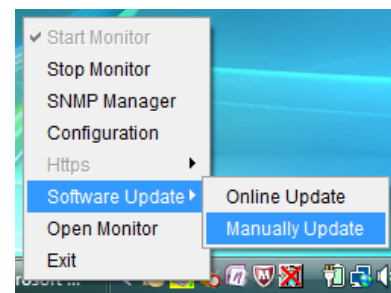


Diagram 3-5

- Manually Update: Users can manually update the software. Follow below steps:
 1. Click "Manually Update" from function menu. Refer to Diagram 3-5.
 2. Click "Browse" to choose file directory. And then click "Upgrade" to upgrade software. Refer to Diagram 3-6.

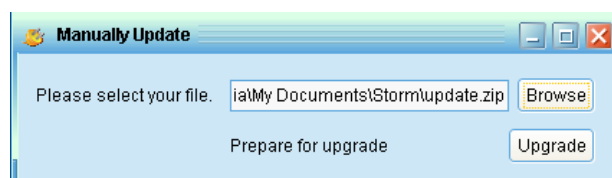


Diagram 3-6

3.7. Open Monitor

Click "Open Monitor" to open monitoring webpage.

3.8. Exit

Click "Exit" to exist service application

4. View Power Pro GUI

View Power Pro GUI includes function menu, shortcut button, login section and main screen.

Refer to diagram 4-1.

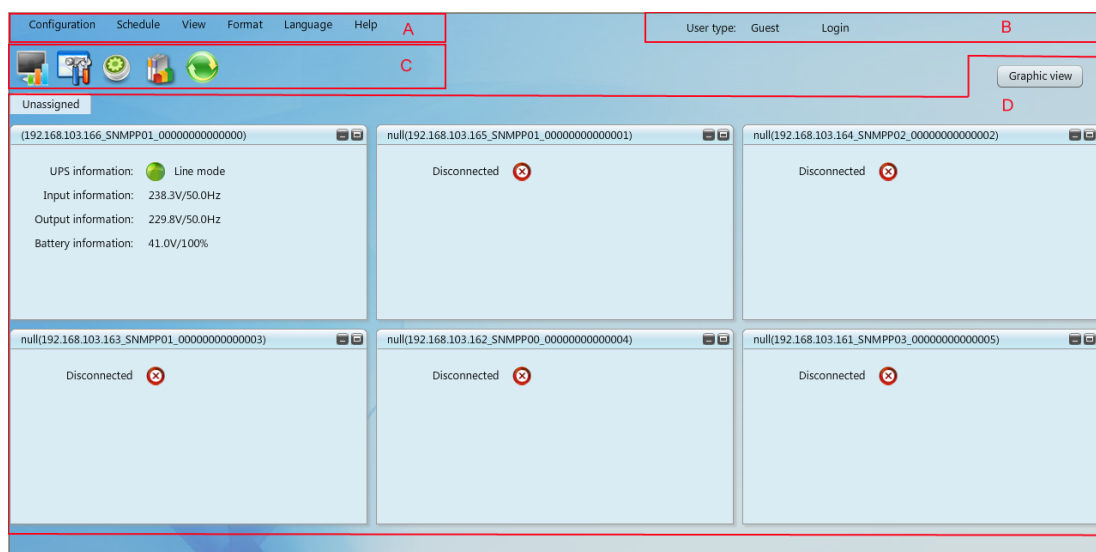


Diagram 4-1

A. Function Menu: It offers complete tool-set for navigation and setting the GUI.

B. Login section: It shows user type for current login user.

C. Shortcut button:



Centralized monitoring.



Password, group area, UPS setting, SMS, E-mail, load configuration, event action, log setting, EMD manager, modbus communication setting.



Scheduled on/off, scheduled battery self-test, and scheduled wake-on-LAN setting.



Event log, event statistics, data, diagram, and EMD log.



Refresh.

D. Main Screen: It will display information and/or control alternatives according to function menu or shortcut menu selected.

5. View Power Pro Menu

5.1. Configuration

5.1.1. Password Setting

It's password configuration for administrator only. The default user name and password is "administrator". Before operating and configuring the software, please login and modify the default password first for security concern. Users can only browse UPS status and information as Guest status without login as an Administrator. Guest can NOT control or execute any setting.

Step 1 Select Configuration >> Password. Refer to Diagram 5-1.

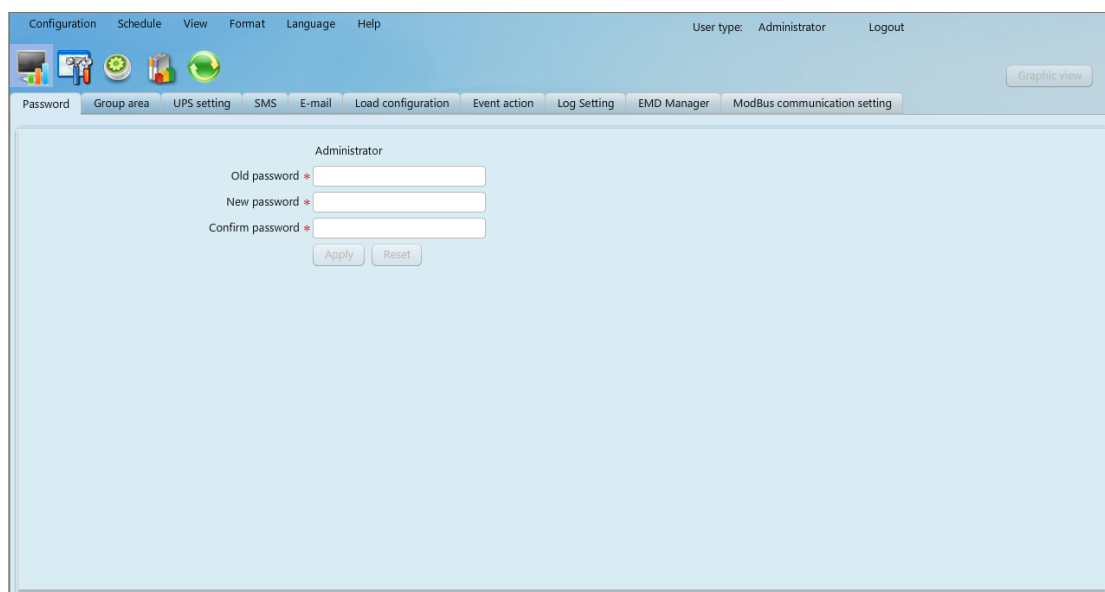


Diagram 5-1

Step 2 Enter old password and type twice new password to modify password for administrator. (The password should be at least 6 digits) Then click "Apply" button to successfully modify password for administrator.

NOTE 1: Simply click "Login" button on the top right corner to log in the software.

NOTE 2: If password is forgotten, it's necessary to re-install the software.

5.1.2. Group area

Select Configuration>>group area, user can assign monitored UPSs into different groups for best management. View Power Pro has a default group called "Unassigned". When a UPS is detected, it will automatically put in the "Unassigned" group. Users are able to not only create and customize groups here, but also assign groups in "UPS setting". Refer to diagram 5-2.

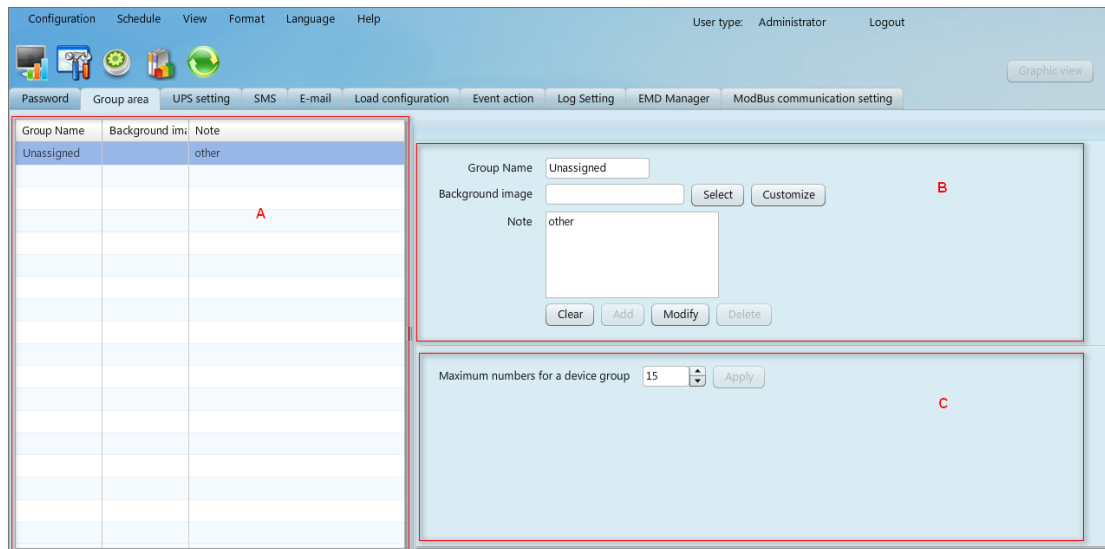


Diagram 5-2

Section A Group list: Shows group information;

Section B Group editor: add/delete, set up and modify group;

- Background image: Click "Customize" button to import preferred image into software as background for graphic view. Or users can simply select preferred photos from default image database by clicking "Select" button.
- Add group: Add group into group list in section B. Then click "Add" button to add.
- Modify group: Select a group from the list in section A to modify the current setting and it will show the current setting in section B directly. After entering new data, simply click "Modify" button to update setting.
- Delete group: Select the group which needs to delete from the list on section A. Then click "delete" button to delete.

NOTE 1: Default group can only be modified, NOT allow to delete.

NOTE 2: When "Add" button is disabled, first execute "Clear" operation.

Section C Maximum numbers for a device group: It means maximum numbers will be shown in each group.

5.1.3. UPS setting

Select Configuration >> UPS setting. It helps users to assign or re-assign groups for monitored UPSs. When a new UPS is detected, it will automatically put in default group - "Unassigned". Refer to diagram 5-3:

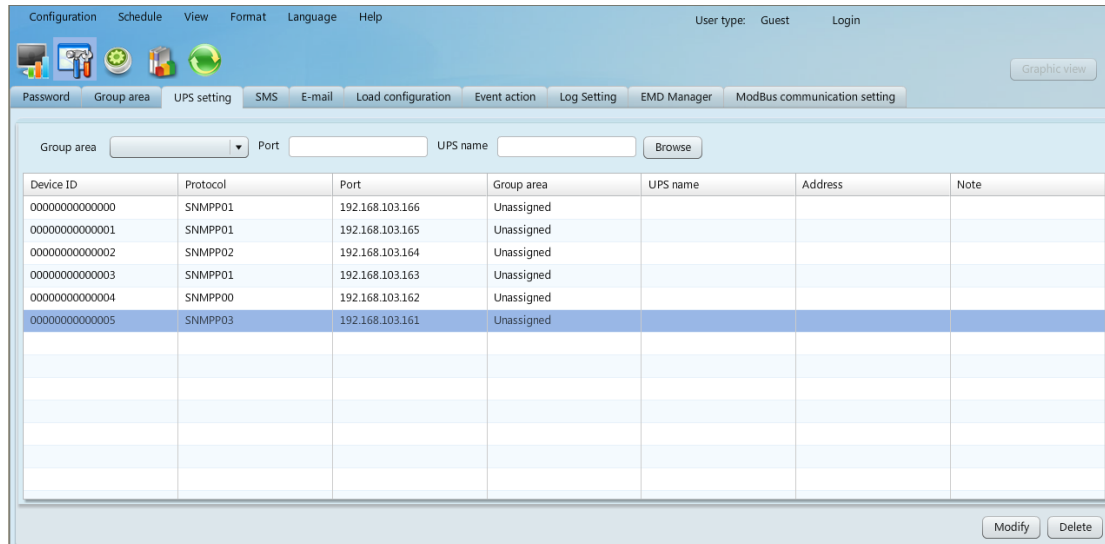


Diagram 5-3

- **Query:** User can query information according to the Group area, Port, UPS name by clicking each column tab.
- **Modify:** Select UPS that need to modify from the list and click "Modify" button for modification. It will pop up information board of each monitored UPS and users can assign or re-assign UPSs to group area. It also can enter the UPS location and name here for internal reference. Click "Apply" button to save all changes. Refer to diagram 5-4:

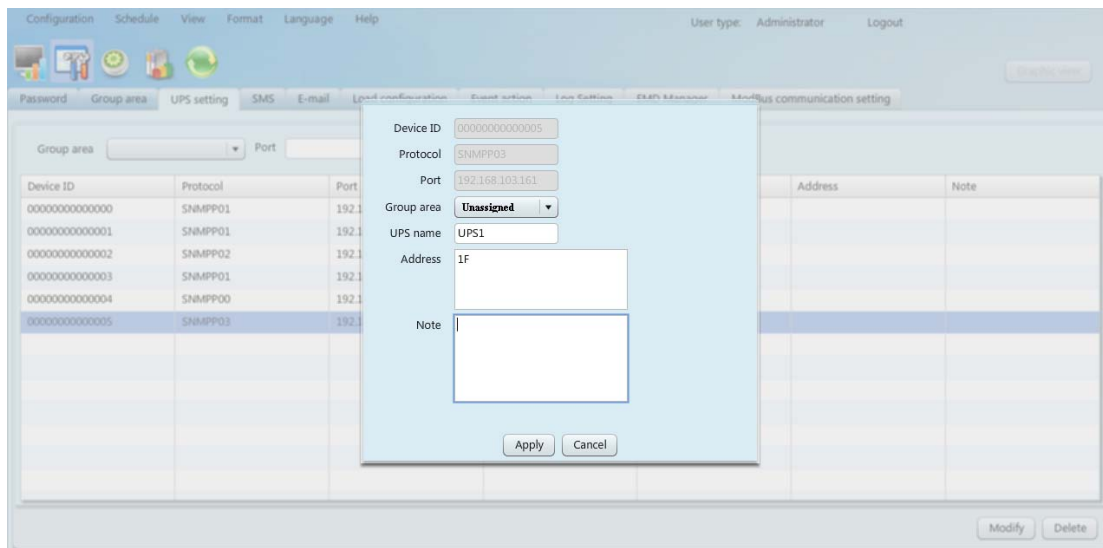


Diagram 5-4

- **Delete:** Select UPS and click "Delete" button to remove it from the list.

5.1.4. SMS

It's for entering SMS receiver list. In the event of an alarm condition occurring, a message about UPS status will be sent to the specified users via mobile phone. For the event receiving list, please configure in "Event Action" column (refer to section 5-1-7)

1. Choose Configuration >> SMS. Refer to Diagram 5-5:

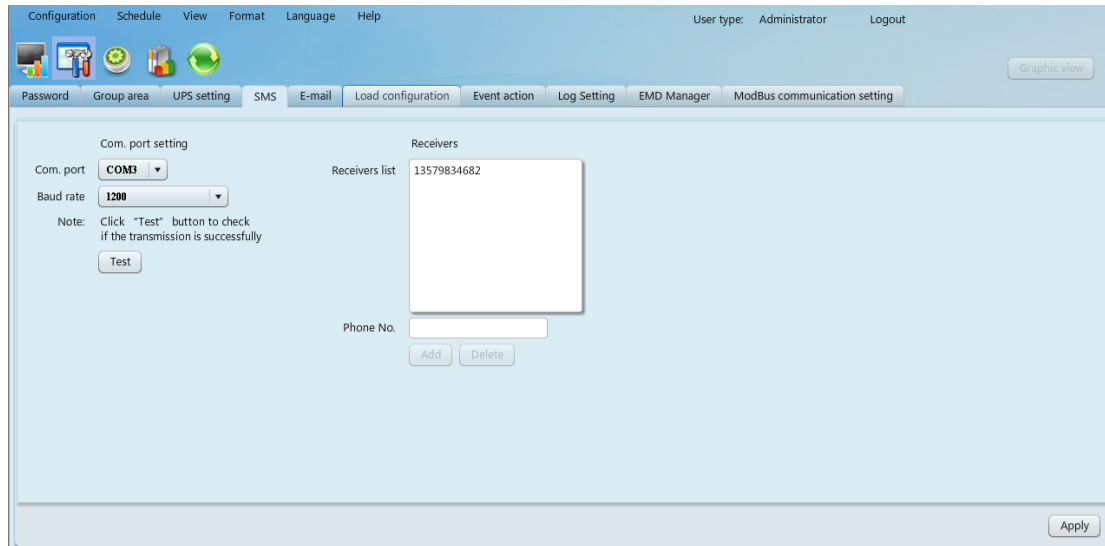


Diagram 5-5

2. Select communication port and baud rate.
3. Enter mobile phone numbers in "Phone no." column and click "Add" button to add phone no. in Receivers List. To delete numbers, simply select phone no. from "Receivers list" and click "Delete".
4. Click "Apply" button to save all changes. The "Test" button can be used to send tests SMS to confirm the correct operation. If all parameters are set up correctly, system will send a test message to all receivers and pop up a successful message. Otherwise, it will pop up a failure dialog to indicate there is an error for parameter setting.

NOTE: It's required to plug-in GSM Modem if sending SMS to mobile phone.

5.1.5. E-mail

This feature enables the configuration to send alarm mail by SMTP server. For the event receiving list, please configure in "Event Action" column.

To use this function, the e-mail service must be correct configured on the computer. All values in this function page are default empty. This action can't be executed without the SMTP information, e-mail account, and password. Besides, the sender account should be allowed for SMTP/POP3 forwarding.

Select Configuration >> E-mail. Refer to Diagram 5-6

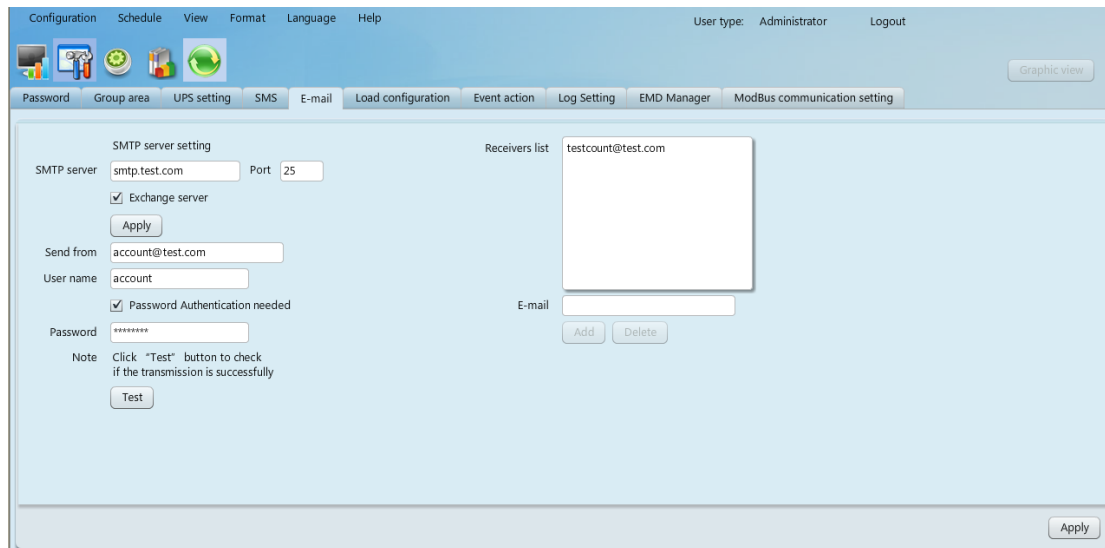


Diagram 5-6

1. Enter SMTP server, SMTP port, Send from E-mail address, User name and password. Click checkbox of password authentication needed for password verify. If using Exchange Server for mailbox system, it's required to configure Exchange server domain name in SMTP sever and select "Exchange server", then click "Apply" button.
2. Enter correct e-mail accounts in E-mail column. Then click "Add" to add into receivers list. To delete e-mail account, simply select accounts from Receivers list and click "Delete" button.
3. Click "Apply" to save all changes. The "Test" button can be used to send a test e-mail to all receivers to confirm correct operation. When the test e-mails are successfully sent to specific recipients, it will pop up a successful message on operated PC. Otherwise, it will pop up a failure dialog to indicate there is an error for parameter setting.

5.1.6. Load configuration

Load configuration can remotely manage other computers via intranet or internet. It can set up remote computers in power-off options, MAC address, execute file action, whether accept scheduled UPS shutdown or not, waiting time for load shutdown and so on. In addition, it also allows one computer to communicate with multiple UPSs. When any event occurs on UPS, the software can configure reactions of the monitored UPS via communicated computer.

1. Select Configuration>>load configuration, refer to diagram 5-7:



2. Add: Add load information (one computer) by clicking "Add" button. Refer to diagram 5-8:



- Enter the **IP address** of this computer. Then, enter MAC address of this computer. Users also can get MAC address by clicking “Auto match” button when the connection is well.
- **Power-off option:** Selecting power-off method for above shutdown system.
 - **Shutdown:** When clicking the checkbox, the selected system will shut down. The default setting is clicked.
 - **Sleep mode:** When clicking the checkbox, selected system will suspend the system instead of a normal shutdown. But this function is only supported by Windows 2000 or higher on supported hardware.
- **On shutdown execute file:** Enter the path of execute file.
- **Waiting time for load shutdown:** If selecting “Accepts scheduled UPS shutdown”, enter to waiting time for load shutdown before shutting down UPS.
- **Selected UPS:** Select UPSs to execute shutdown action when entered PC is shut down. Click “Apply” button to save all changes.

3. **Modify:** Select one from list to modify configuration by clicking "Modify" button. User can also click "Delete" button to delete this information.
4. **Export:** Users can export load setting table in PDF format by clicking "Export" button.

5.1.7. Event action

It is to set up reactions after events occur. Select Configuration >> Event action, refer to diagram 5-9:

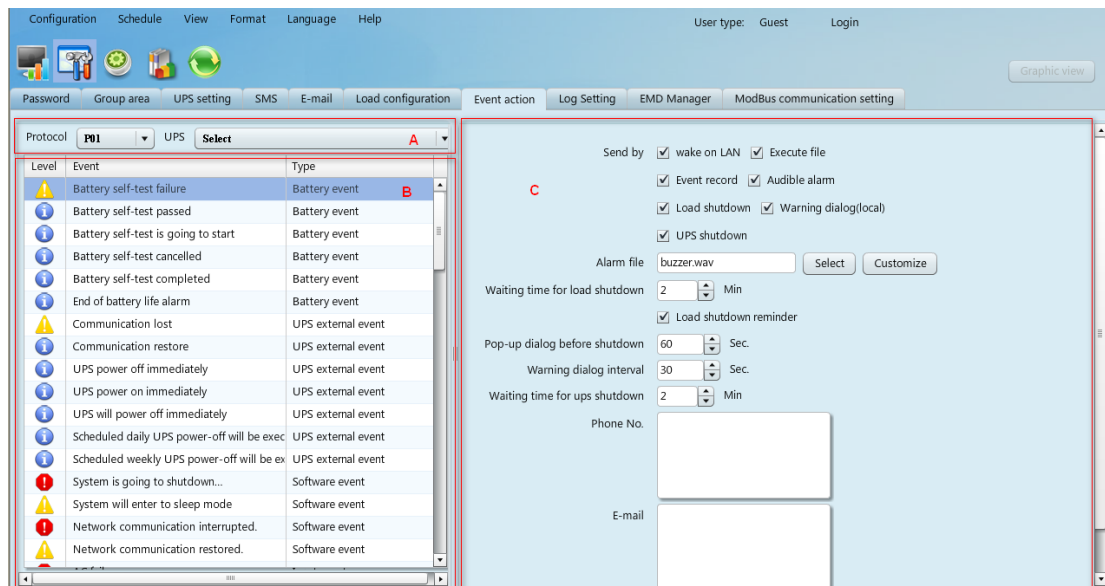


Diagram 5-9

Section A: List all detected UPSs. The system default is all UPSs.

Section B: UPS event list.

Section C: Event action editor

Select UPS from section A and then select event from section B. When selecting event, it's necessary to set up at least one reaction from section C. Click "Apply" button to save setting.

This software provides seven reactions for UPS events.

- **Wake on LAN:** It is a technology to remotely wake up one computer by a network message. It is also required to have ATX power and hardware support for remote PCs to implement this function. When event occurs, this software will wake up PC by clicking this checkbox.
- **Execute file:** When event occurs, it will request connected computer to execute file.
- **Event record:** When event occurs, it will save the event records to the database.
- **Audible alarm:** When event occurs, it will play selected media file. If user wants to use customized sound, it's necessary to import media file into software by clicking "Customize" button. And then, select this imported media file by clicking "Select" button.
- **Load shutdown:** When event occurs, it will notify Shutdown wizard on remote PCs to shut down computer.
- **Warning dialog (local):** When event occurs, it will pop up message box to notify users.
- **SMS:** When event occurs, it will send event message to receivers via mobile phone.
- **E-mail:** When event occurs, it will send mail to receivers via email.
- **UPS shutdown:** When event occurs, it will shut down the UPS.

Note 1: When editing receiver list in SMS or e-mail columns, it's necessary to refresh the event action page to update receiver list.

Note 2: Event list will be different according to different types of UPS.

5.1.8. Log setting

- **Refresh frequency:** The setting range for "Refresh frequency" is 2~600 seconds. It will affect the displayed data refreshed in software screen.
- **Record interval:** Users can set up "Record Interval", "The max. Numbers of logs for historical data" and "The max. Numbers of logs for historical events" according to real situation.

The setting range for "Record interval" is 30~600 seconds. It will effect history data displayed under View >> History >> Data.

1. Select configuration >> Log setting. Refer to Diagram 5-10:

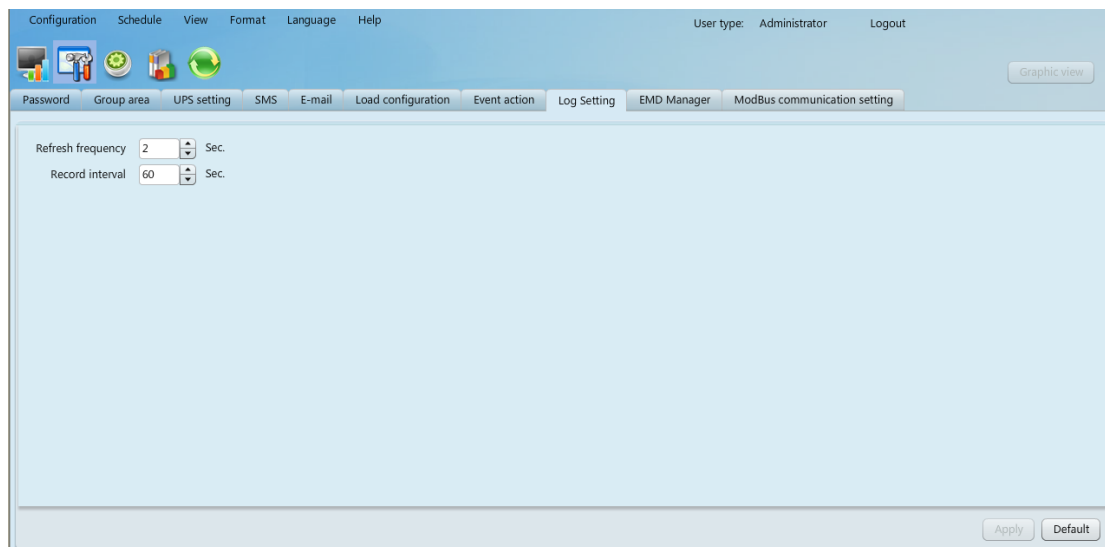


Diagram 5-10

2. Enter time interval and click "Apply" button to save all settings.
3. Click "Default" button to recover the default setting.

5.1.9. EMD Manager

EMD Manager is used to manage Environmental Monitoring Devices. Users can define events and set message texts for each event. It also can set up warning points for temperature, humidity and smoke of devices.

- **Dry contact event:** Users can define events and set event level. After event is successfully added, users can configure and set alarm. Refer to Diagram 5-11.

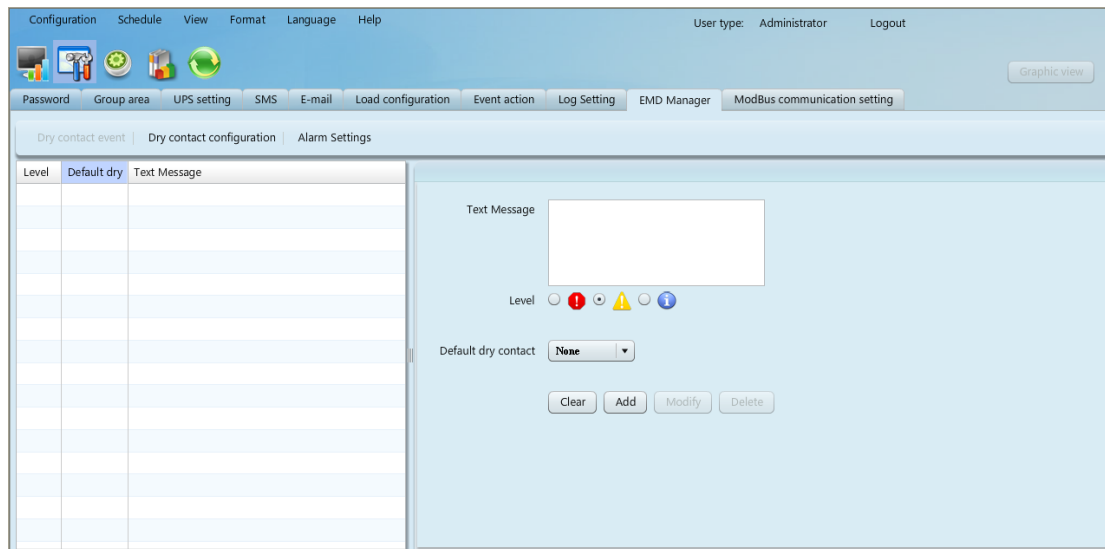


Diagram 5-11

- **Text Message:** The description of the dry contact event.
- **Default dry Contact:** Define dry contact no. to send event message. There are five selections: none, 1, 2, 3 and 4. If selecting any value from 1 to 4, any environmental monitoring device (EMD) which is detected defined event will send event message. If selecting none, it means this event is defined as special event. Then, users can assign specific environmental monitoring device (EMD) to receive this event message. Please refer this special event setting in "Dry contact configuration" section.
- **Dry contact configuration:** Users can define special events with assigned dry contact no. for specific environmental monitoring device (EMD). If any defined event is detected by assigned device via assigned dry contact no., it will send alarm message via software. Refer to Diagram 5-12.

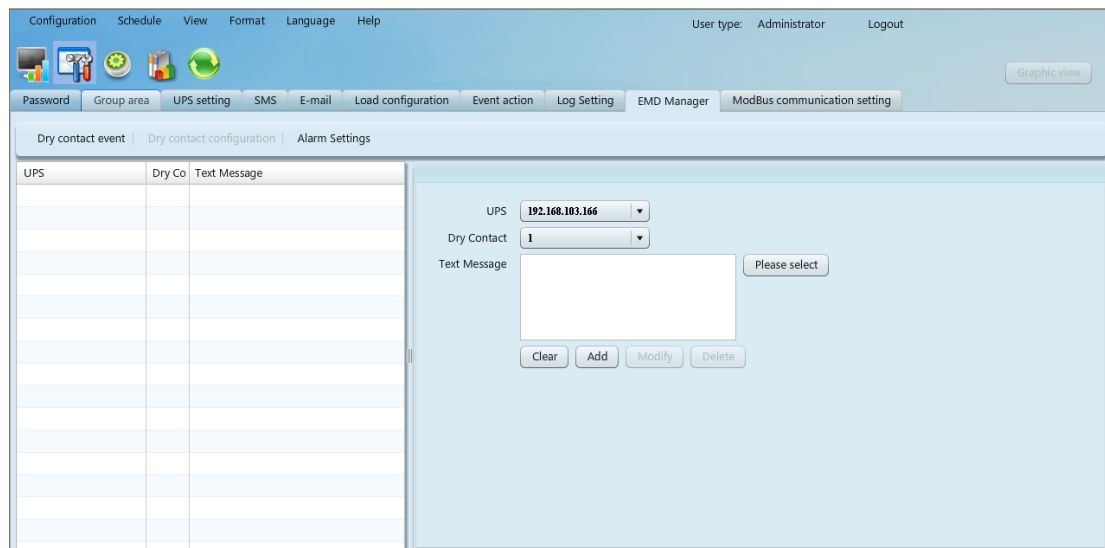


Diagram 5-12

- **Alarm Settings:** Set up alarm range for temperature and humidity. If detected figures are out of setting range, it will send alarm message. Refer to Diagram 5-13.

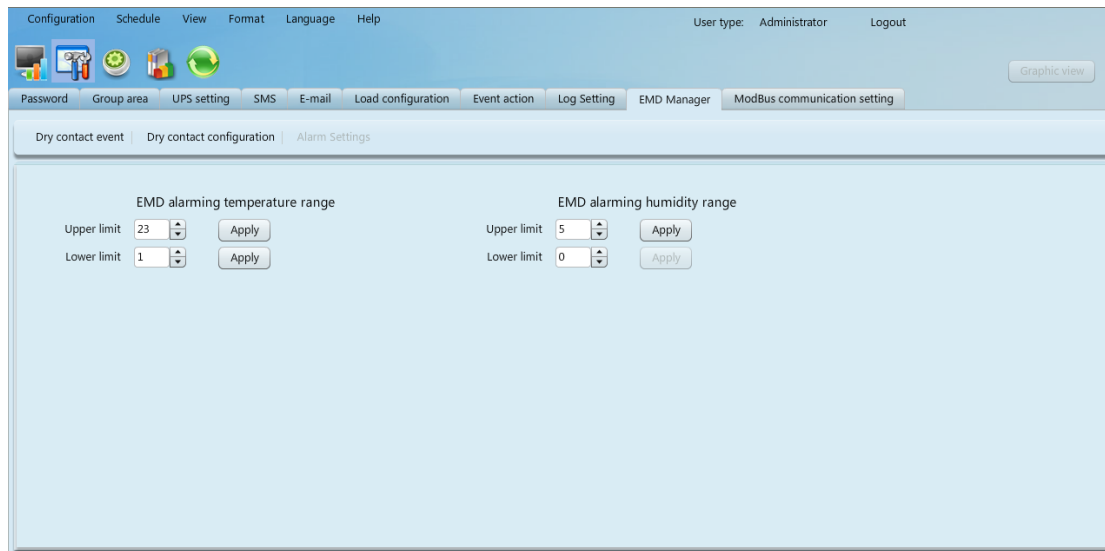


Diagram 5-13

5.1.10. Modbus communication setting

It will display all connected PCs through ModBus.

Step 1 Select configuration >> ModBus Communication Setting. Refer to Diagram 5-14.

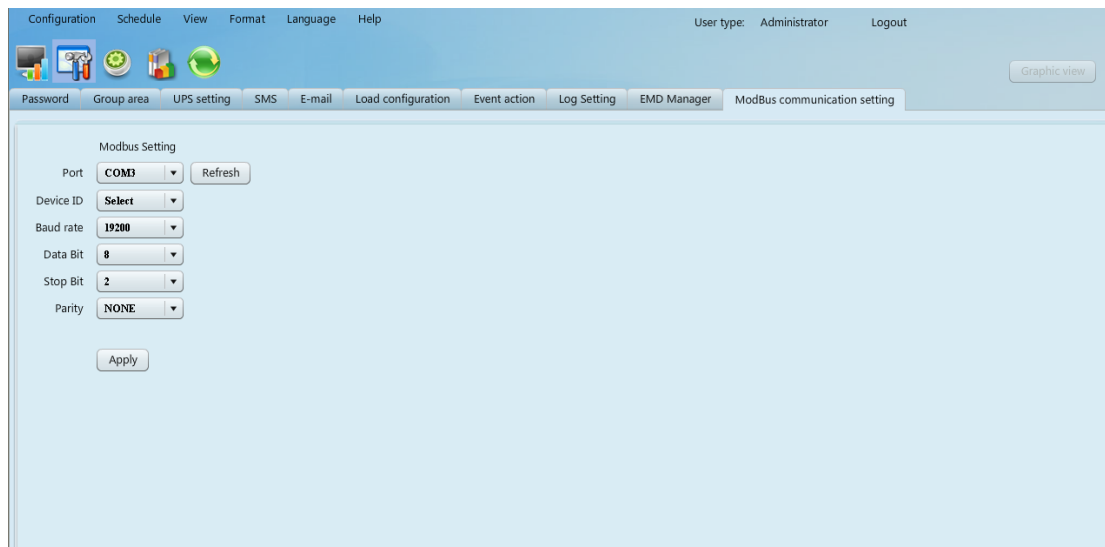


Diagram 5-14

Step 2 Com. port setting:

- The default ID for nominated com. port is 0;
- Selectable baud rates are 1200, 2400, 4800, 9600, and 19200. The default setting is 19200;
- Selectable data bit is 7 and 8. The default setting is 8;
- Selectable stop bit is 1 and 2. The default setting is 1;
- Supported parity is ODD parity, event parity and NONE. The default setting is NONE.

NOTE: This function is only available for the UPS with ModBus communication port.

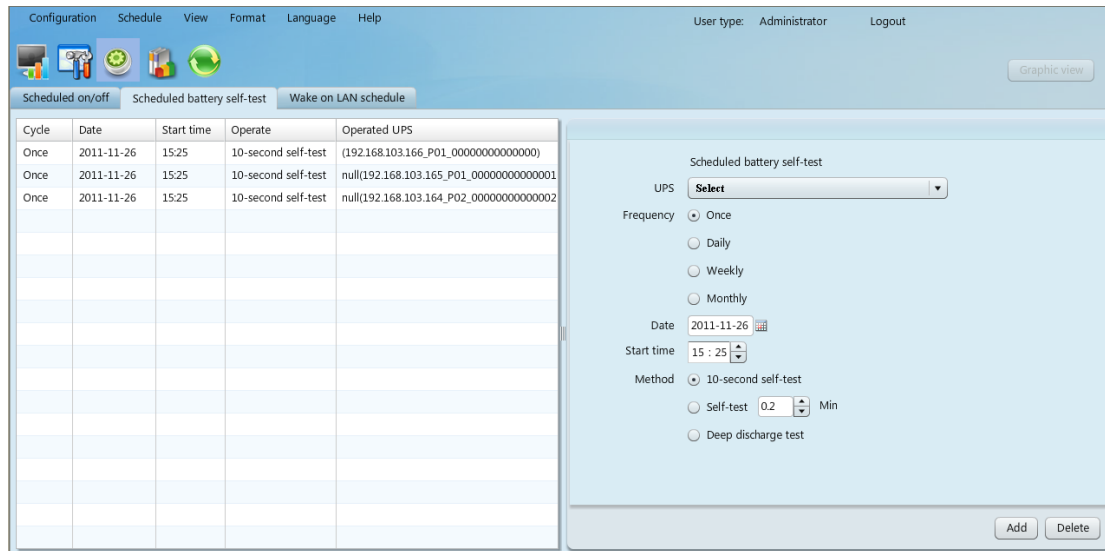


Diagram 5-16

1. Select method and time parameters. There are three self-test methods:
 - **10-second self-test:** Battery will discharge for 10 seconds.
 - **Self-test:** Users can set battery discharge time for self-test.
 - **Deep test:** This test will allow battery to discharge until low battery level.
2. Click "Add" to add task. If task is successfully added, it will display on the task table on the left-hand side. Select task from table list and click "Delete" button to delete the task.

5.2.3. Wake on LAN schedule

It supports wake-on-LAN schedule for one or multiple computers at once, daily, and weekly frequency.

1. Select Schedule >> Wake on LAN schedule, refer to diagram 5-17:

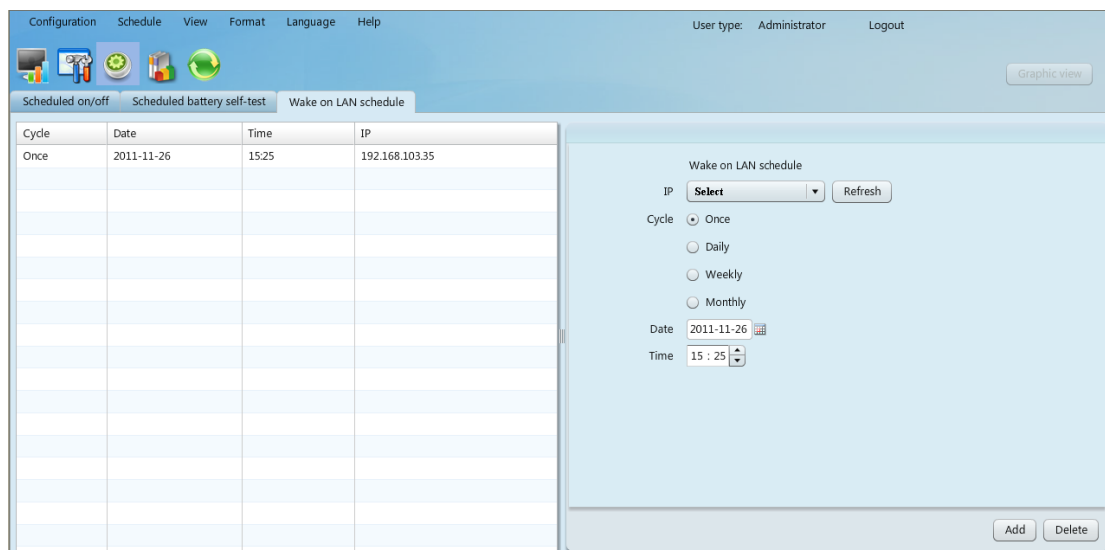


Diagram 5-17

2. Select IP, Cycle, Date and Time, and then click "Add" button to add plan.
3. Select one plan from schedule list, and then click "Delete" to delete plan.

5.3. View

5.3.1. Centralized monitoring

It includes Text view and Graphic view. Users can exchange view mode by clicking "Text view" button and "Graphic view" button.

- **Text view:** Each UPS is displayed in the panel form and it shows UPS working status and data. Multiple UPSs will be displayed with multiple UPS panels. Refer to diagram 5-18:

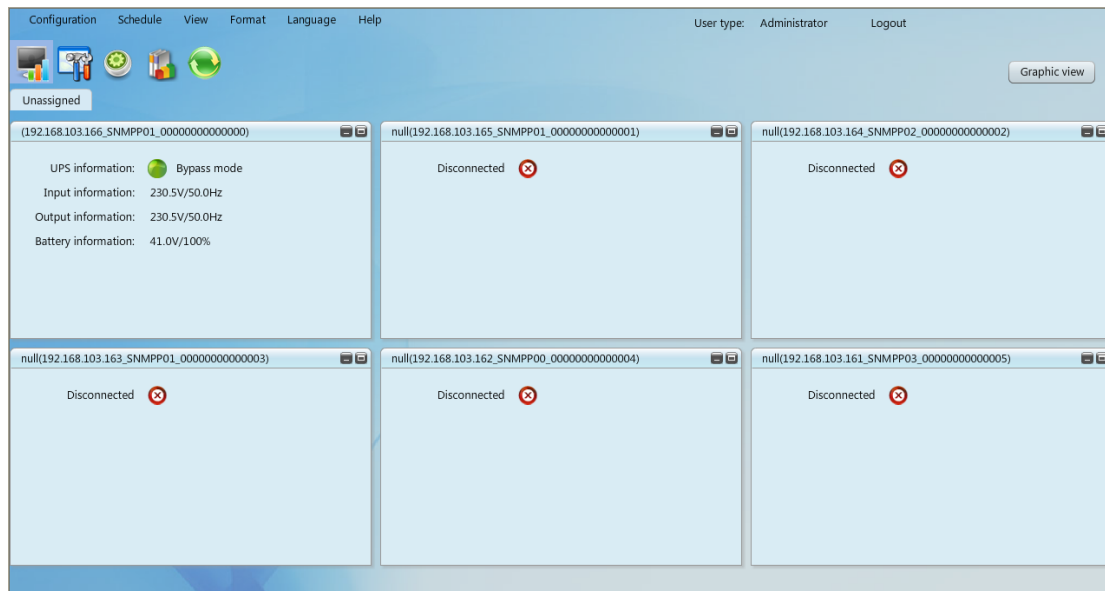


Diagram 5-18

- **Graphic view:** Each UPS is displayed as a simple icon. It shows its status icon with background picture. To avoid any mistakes, it also supports security function. Only when user type is administrator, it's allowed to "unlock" these icons. Then, administrator can drag and drop the icon anywhere freely. The default setting is in "lock" status. Refer to diagram 5-19-a and diagram 5-19-b.

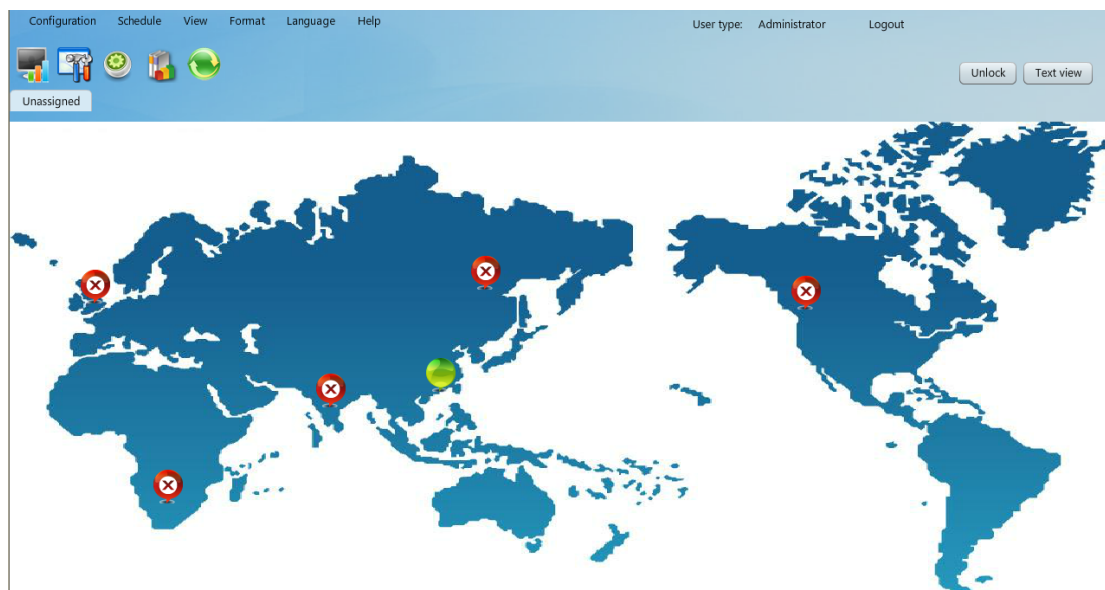


Diagram 5-19-a

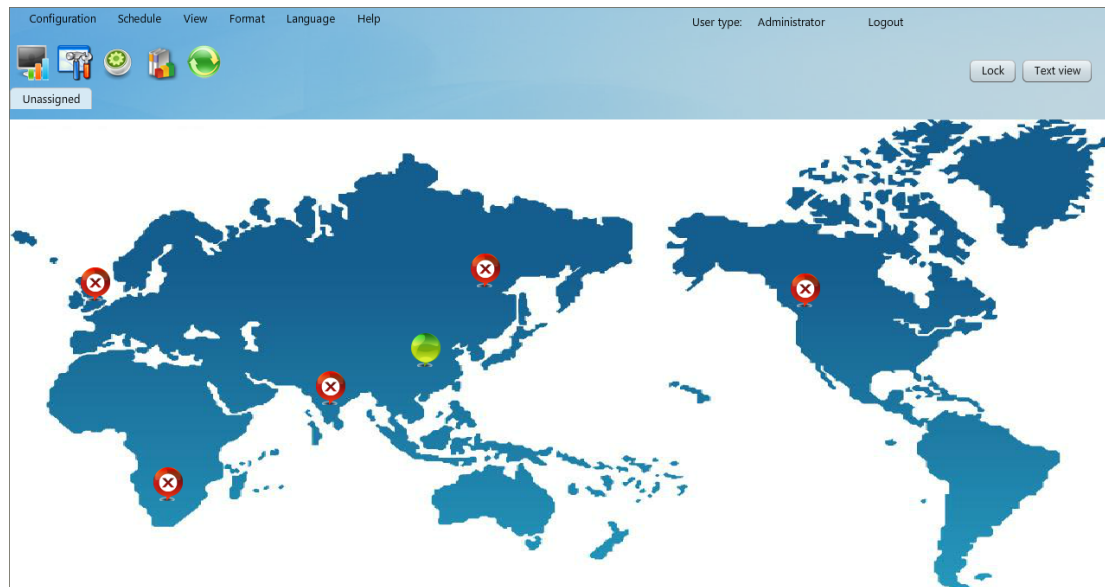


Diagram 5-19-b

- **UPS detail information:** On the Text view mode, users can go into UPS monitoring interface by double clicking UPS panel. On the Graphic view mode, users can double click UPS icon to enter detailed UPS monitoring interface. Refer to diagram 5-20:

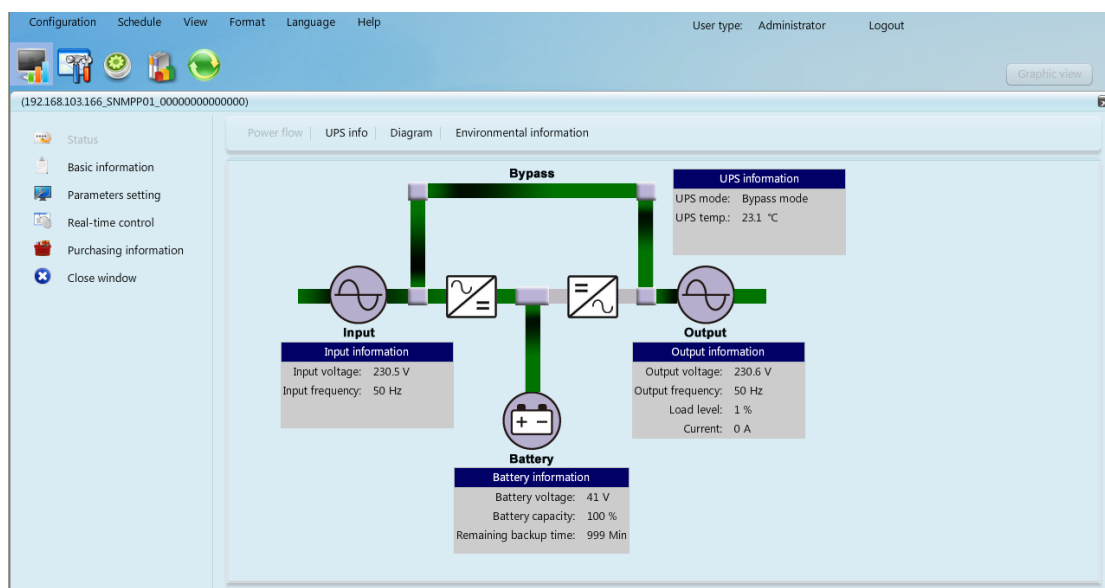


Diagram 5-20

5.3.1.1. Status

5.3.1.1.1. Power Flow

Select Status >> Power Flow. Refer to diagram 5-21. In the Power Flow window, it's shown the internal dynamic working flow of the UPS.

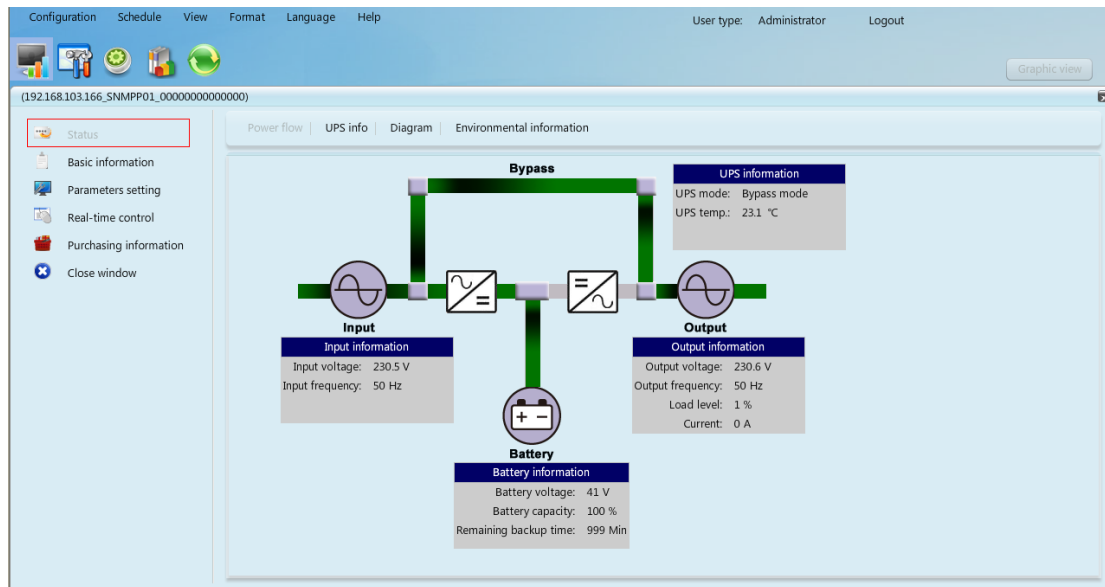


Diagram 5-21

Green/black flow means working well. Grey bar means that the object is present but not in use at the moment. There are four information blocks to display details about input, output, UPS and battery information.

- Input information includes input voltage and input frequency.
- Output information includes output voltage, output frequency, load level, and output current.
- UPS information includes UPS operation mode and UPS temperature.
- Battery information includes battery voltage, battery capacity and remaining backup time.

5.3.1.1.1. UPS Info

Select Status >> UPS Info. Refer to Diagram 5-22.

In the "UPS Info" window, it's shown real-time monitored UPS data including input, output, UPS, and battery information in text and bar.

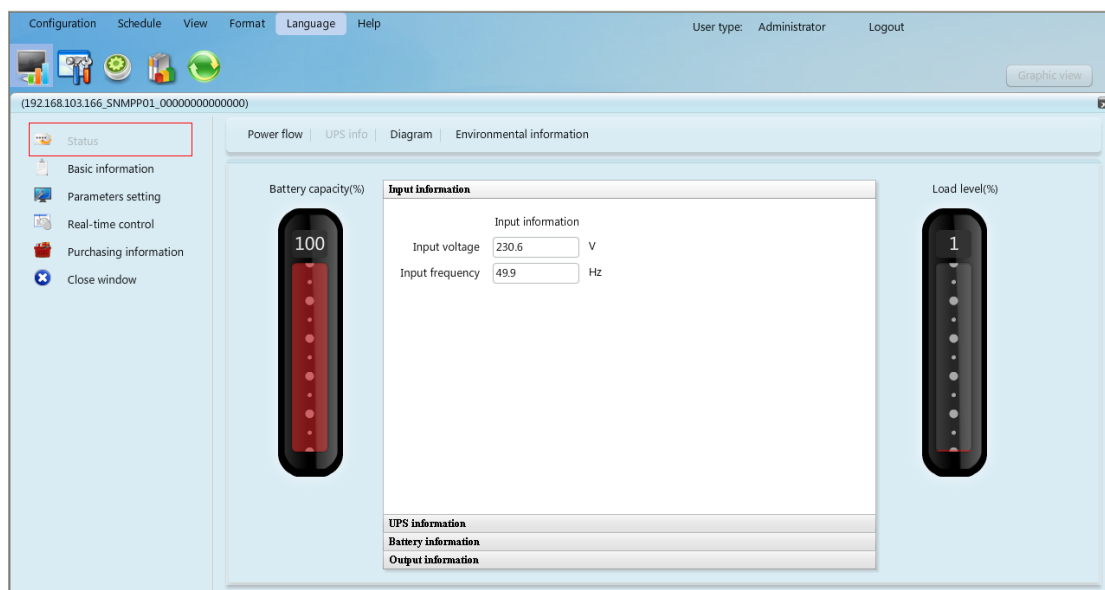


Diagram 5-22

5.3.1.1.2. Diagram

Select View >> Status >> Diagram. Refer to Diagram 5-23.

In the Diagram window, it's shown real-time monitored UPS data including voltage, frequency, load, battery, temperature information in diagram.

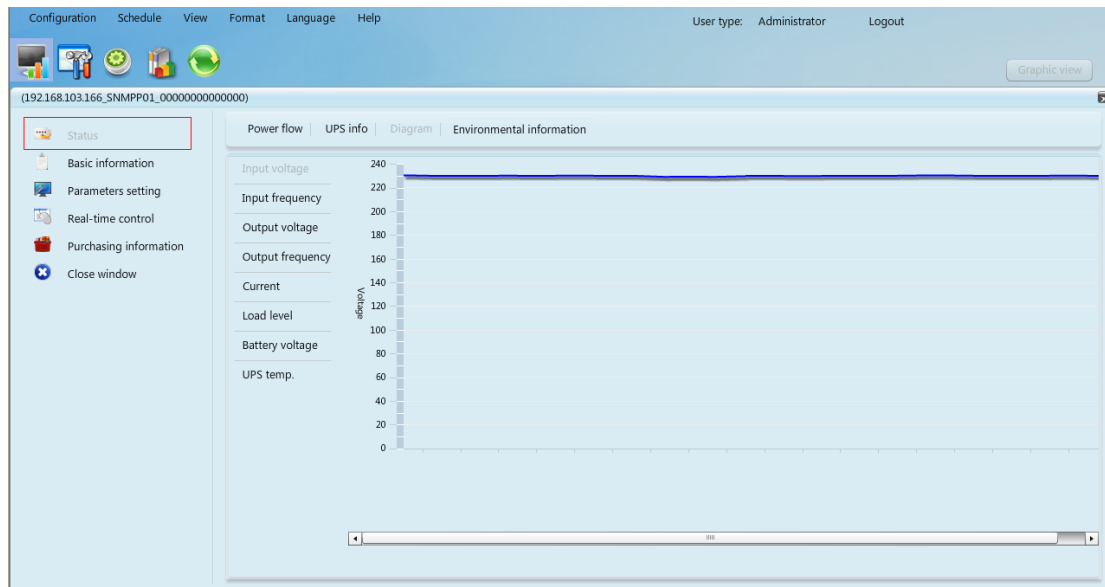


Diagram 5-23

5.3.1.1.3. Environmental information

In the Environmental information window, it shows the current temperature and humidity.

Select Status >> Environmental information. Refer to Diagram 5-24

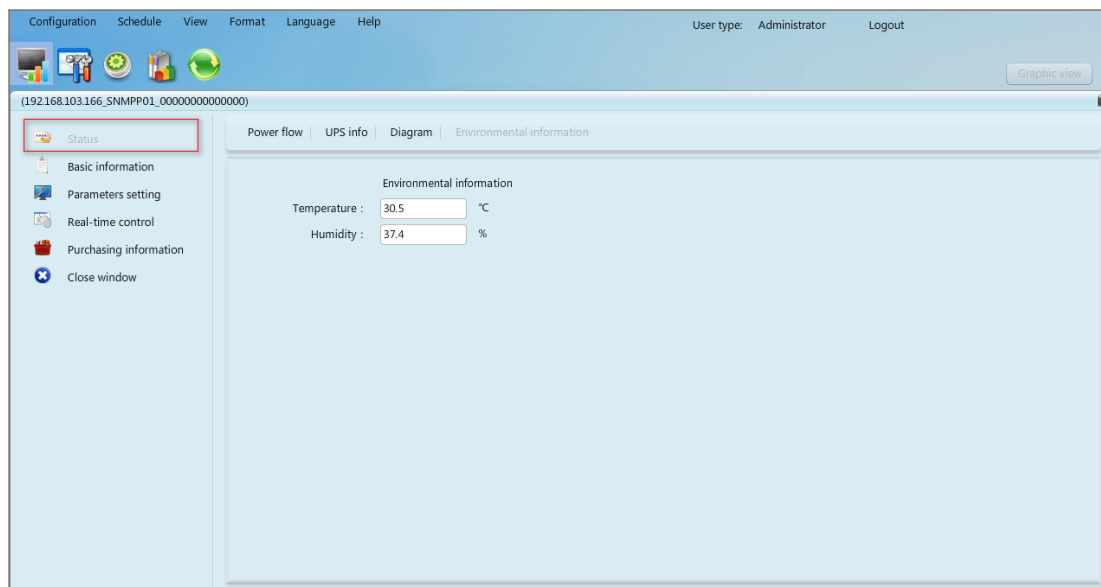


Diagram 5-24

Note: This information is only available when SNMP card is connected with Environmental monitoring device (EMD).

5.3.1.2. Basic information

It includes UPS basic information, battery information, UPS purchasing information, and UPS rated information. Refer to diagram 5-25.

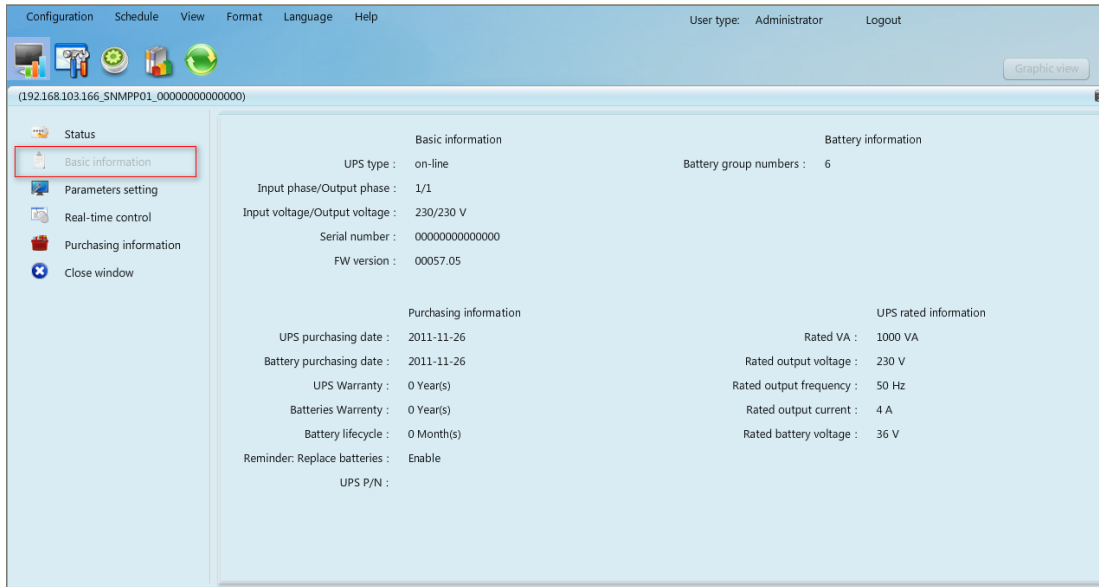


Diagram 5-25

5.3.1.3. Parameters setting

Some UPS functions can be set and changed via software. Parameter setting includes backup time setting for programmable outlet (P1), battery number setting, voltage and frequency range setting for bypass mode, and voltage range setting for ECO mode.

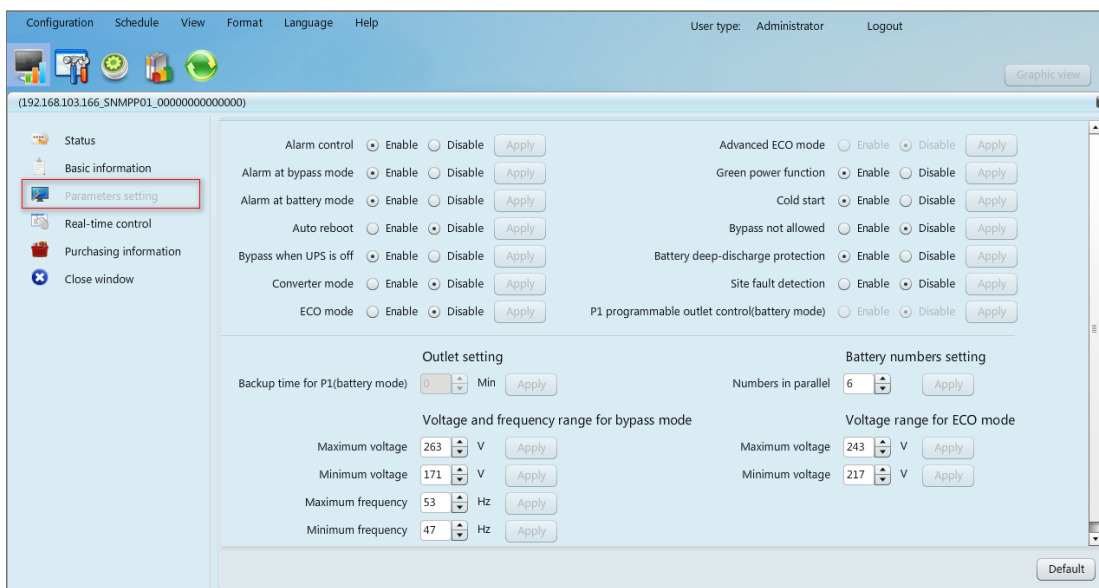


Diagram 5-26

Note: Different UPSs may access different parameter setting.

1. Select the functions by clicking "Enable" or "Disable" button. Change the numbers by clicking up-down arrows or modify the numbers directly in the number column.
2. Click "Apply" button to save the settings. Each function setting is saved by clicking "Apply" button in each section.
3. Click "Default" button to recover the default setting.

Note: Any functions which are not supported by UPS will not be able to access.

- Alarm Control: If enabled, UPS alarm will be activated. Vice versa.
- Alarm at bypass mode: If enabled, UPS alarms when it's working at bypass mode. Vice versa.
- Alarm at battery mode: If disabled, UPS will not alarm when it's working at battery mode. Vice versa.
- Auto reboot: If enabled, UPS will auto recover when AC is recovering. Vice versa.
- Bypass when UPS is off: If enabled, AC will directly provide power to connected devices when UPS is off. Vice versa.
- Converter mode: If enabled, the UPS will operate in converter mode. Vice versa.
- ECO mode: If enabled, the UPS will operate in ECO mode when input voltage is within acceptable range. Vice versa.
- Battery open status check: If enabled, the monitored UPS will check if the battery connection ok or not when UPS is turned on.
- Cold start: If disabled, the UPS can be turned on only when AC is normally connected to UPS. Vice versa.
- Bypass not allowed: If enabled, the UPS will not transfer to bypass mode under any conditions. If disabled, the UPS will be allowed to transfer to bypass mode according to UPS internal setting.
- Battery deep-discharge protection: If enabled, the monitored UPS shutdown in accordance with the condition of battery and load on battery mode to protect battery. Vice versa.
- Site fault detection: If enabled, the monitored UPS will beep when the input neutral and hot wires are reversed. Vice versa.
- P1 Programmable outlet control (battery mode): If enabled, when UPS is running at battery mode, it will cut off P1 outlets after backup setting time arrive. If disabled, UPS will provide continuous power to P1 outlets until the battery is running out.
- Outlet setting: Users can set limited backup time for P1 outlets when UPS is on battery mode.
- Battery numbers setting:
 - Numbers in parallel: set battery numbers in parallel
- Voltage and frequency range for bypass mode: Set acceptable voltage and frequency range in bypass mode
 - Maximum and minimum voltage: When UPS is on bypass mode and input voltage is out of setting range, UPS will enter battery mode.
 - Maximum and minimum frequency: When UPS is on bypass mode and input frequency is out of setting range, UPS will enter battery mode.
- Voltage range for ECO mode: Set acceptable voltage range for ECO mode.

5.3.1.4. Real-time control

Refer to diagram 5-27.

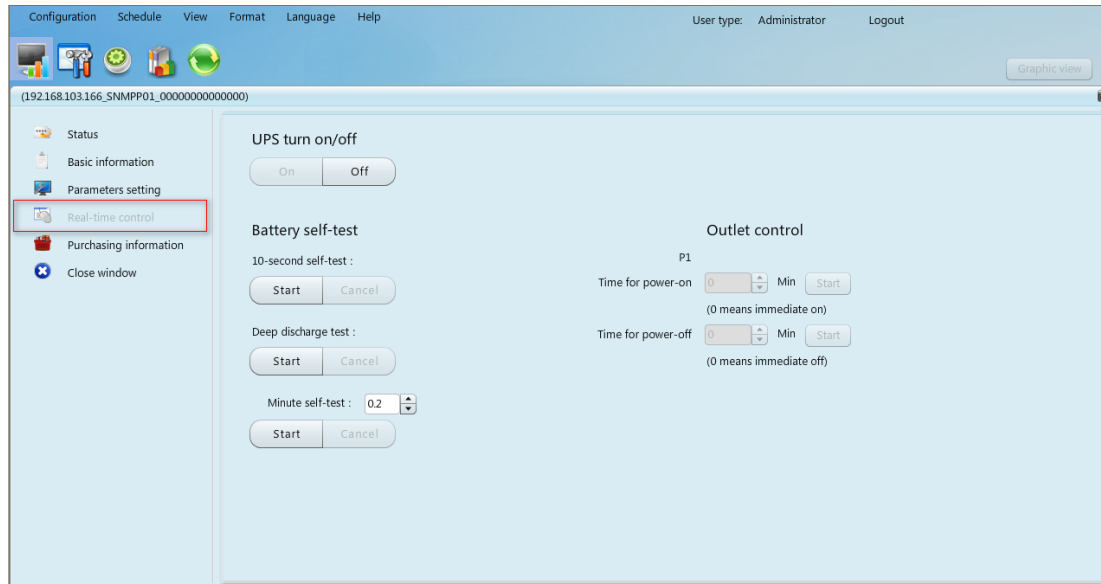



Diagram 5-27

1. Choose real-time control function by clicking "Start" button on each function section. You can real-time control the UPS by executing following operation:
 - UPS turn On/Off: Click "On" to turn on the UPS and "Off" to turn off the UPS immediately.
 - Battery Self-Test: Software offers three types of battery self-test: 10-second self-test, deep discharge test, and self-defined self-test. Simply clicking "Start" button from each type. It will execute the self-test immediately.
 - Outlet Control: It will cut off programmable outlets (P1) when setting time arrives. When entering 0 in timer column and click "Start" button, it will cut off outlets immediately when UPS works in battery mode.

Note: Different UPSs may access different parameter setting.

5.3.1.5. Purchasing information

Users can enter UPS purchasing date, battery purchasing date, UPS warranty time, battery warranty time, battery lifecycle, and battery replacement reminder for future reference.

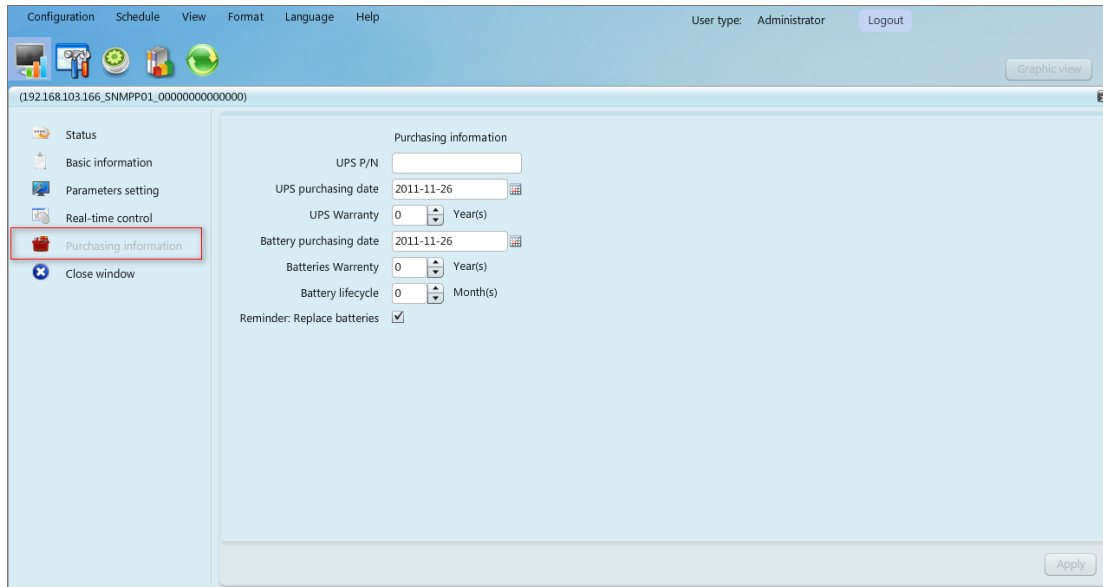

The screenshot displays the 'Purchasing information' configuration window within the ViewPower Pro 1.13 software. The window has a light blue header with a menu bar (Configuration, Schedule, View, Format, Language, Help) and a user status bar (User type: Administrator, Logout). A toolbar with icons for status, basic information, parameters setting, real-time control, and purchasing information is visible. The left sidebar contains a tree view with 'Purchasing information' selected and highlighted with a red box. The main area is titled 'Purchasing information' and contains the following fields:

- UPS P/N:
- UPS purchasing date: (calendar icon)
- UPS Warranty: Year(s)
- Battery purchasing date: (calendar icon)
- Batteries Warranty: Year(s)
- Battery lifecycle: Month(s)
- Reminder: Replace batteries: ☒

An 'Apply' button is located at the bottom right of the window.

Diagram 5-28

1. Please fill out purchasing information.
2. Click "Apply" button to save all data.

5.3.2. History

5.3.2.1. Event Log

In the Event Log window, it's shown all history events. Users can analyze the history data and improve the current electricity environment according to history data.

1. Select View >> History >> Event Log. Refer to Diagram 5-29

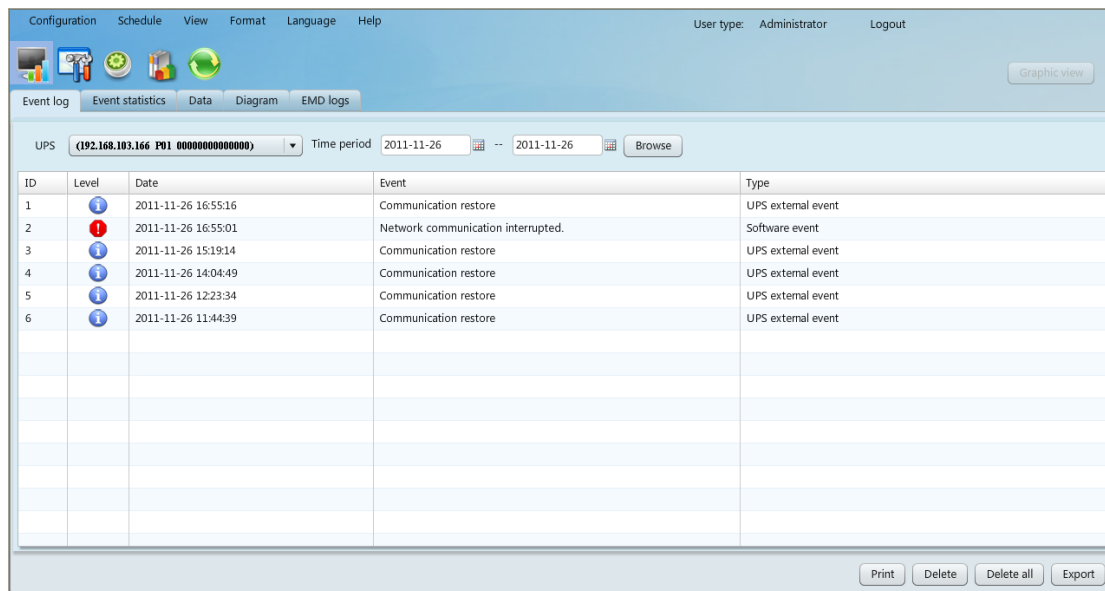


Diagram 5-29

2. Select UPS from com. port list. Users still can retrieve old data saved in the software even though the UPS is no longer connected to local system.
3. Select time period by clicking calendar icon. Then click "Browse" button to get list of all history events during selected period time.
4. Print/Delete/Export function keys
 - "Print": Click "Print" button to print the current event log.
 - "Delete/Delete all": To delete specific event, simply select that event and then click "Delete" button. Or click "Delete all" button to delete all history events on the listed table.
 - "Export": Click "Export" button to save listed table to local PC in .CSV file.

5.3.2.2. Event Statistics

It will list down and provide all event statistics for UPSs with software installed based on time period A and time period B, and the change percentage [= 100*(B/A – 1)%].

NOTE: Event types include UPS internal event, bypass event, battery event, software event, load event, input event, parallel system event and communication event.

Step 1 Select History >> Event Statistics. Or click shortcut icon . Refer to Diagram 5-30.

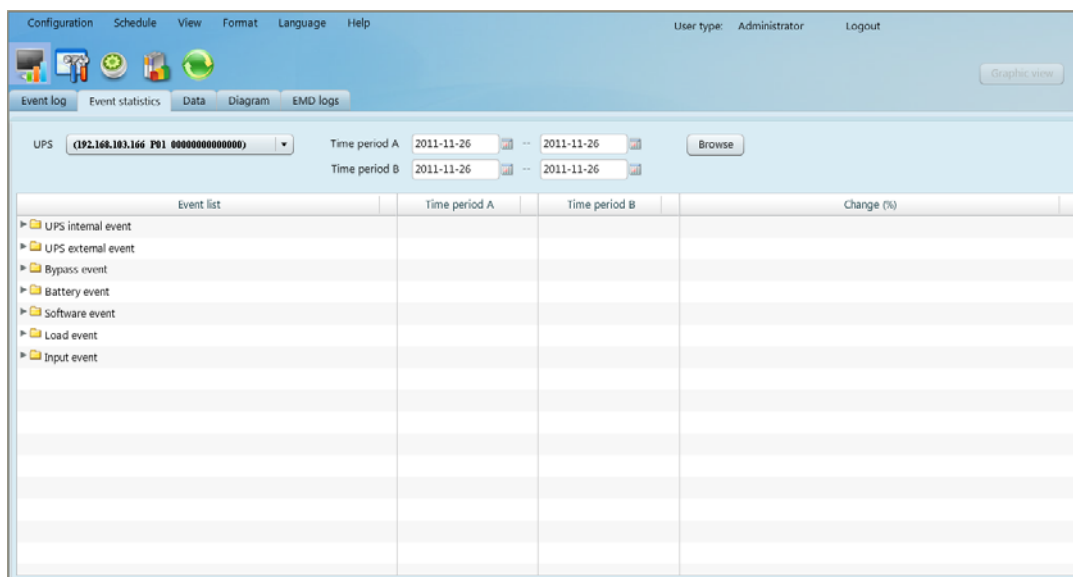


Diagram 5-30

Step 2 Select UPS from com. port list. Users still can retrieve old data saved in the software even though the UPS is no longer connected to local system.

Step 3 Select two periods from clicking "calendar" icon. Then click "Browse" button. The statistics result will be listed in below table according to event types. Refer to Diagram 5-31.

Step 4 Click "Print" button to print event statistics.


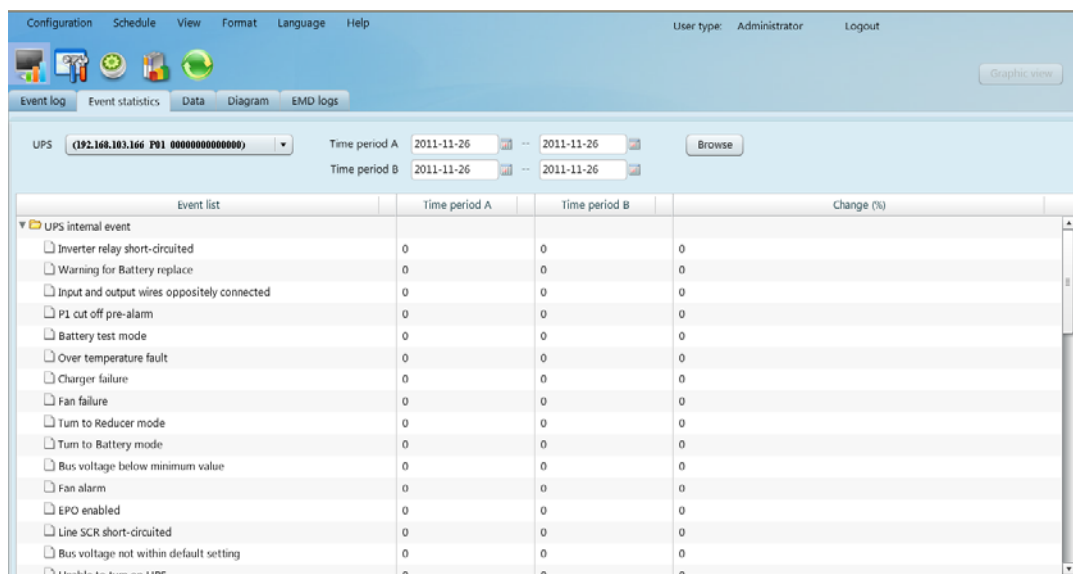


Diagram 5-31

5.3.2.3. Data

In the window of Data, it shows UPS power data in figures during selected period time. Software also offers print, save as, and delete functions. User can customize record interval and default data is recorded in 60 seconds interval.

Step 1 Select View >> History >> Data. Refer to Diagram 5-32.

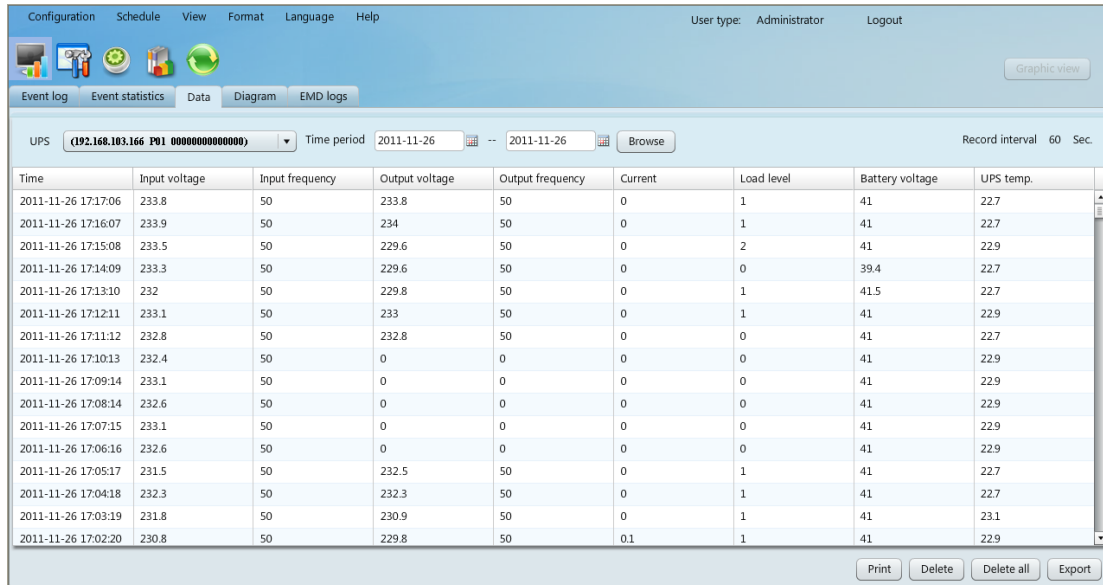

Time	Input voltage	Input frequency	Output voltage	Output frequency	Current	Load level	Battery voltage	UPS temp.
2011-11-26 17:17:06	233.8	50	233.8	50	0	1	41	22.7
2011-11-26 17:16:07	233.9	50	234	50	0	1	41	22.7
2011-11-26 17:15:08	233.5	50	229.6	50	0	2	41	22.9
2011-11-26 17:14:09	233.3	50	229.6	50	0	0	39.4	22.7
2011-11-26 17:13:10	232	50	229.8	50	0	1	41.5	22.7
2011-11-26 17:12:11	233.1	50	233	50	0	1	41	22.9
2011-11-26 17:11:12	232.8	50	232.8	50	0	0	41	22.7
2011-11-26 17:10:13	232.4	50	0	0	0	0	41	22.9
2011-11-26 17:09:14	233.1	50	0	0	0	0	41	22.9
2011-11-26 17:08:14	232.6	50	0	0	0	0	41	22.9
2011-11-26 17:07:15	233.1	50	0	0	0	0	41	22.9
2011-11-26 17:06:16	232.6	50	0	0	0	0	41	22.9
2011-11-26 17:05:17	231.5	50	232.5	50	0	1	41	22.7
2011-11-26 17:04:18	232.3	50	232.3	50	0	1	41	22.7
2011-11-26 17:03:19	231.8	50	230.9	50	0	1	41	23.1
2011-11-26 17:02:20	230.8	50	229.8	50	0.1	1	41	22.9

Diagram 5-32

NOTE: This screen may be different for different types of UPSs.

Step 2 Select UPS from com. port list. Users still can retrieve old data saved in the software even though the UPS is no longer connected to local system.

Step 3 Select the starting time and ending time by clicking calendar icon. Then click "Browse" button to get the data table.

- **"Print":** Print the listed data table.
- **"Delete":** Select specific data and click "Delete" button to delete the record.
- **"Delete all":** Click "Delete all" button to delete all records on the listed table.
- **"Export":** Click "Export" button to save listed table to local PC in .CSV file.

5.3.2.4. Diagram

In the Diagram window, it shows UPS power data in diagram during selected period time. UPS power data includes input voltage, output voltage, input frequency, output frequency, load level, battery capacity, and UPS temperature.

Step 1 Select View >> History >> Diagram. Refer to Diagram 5-33.

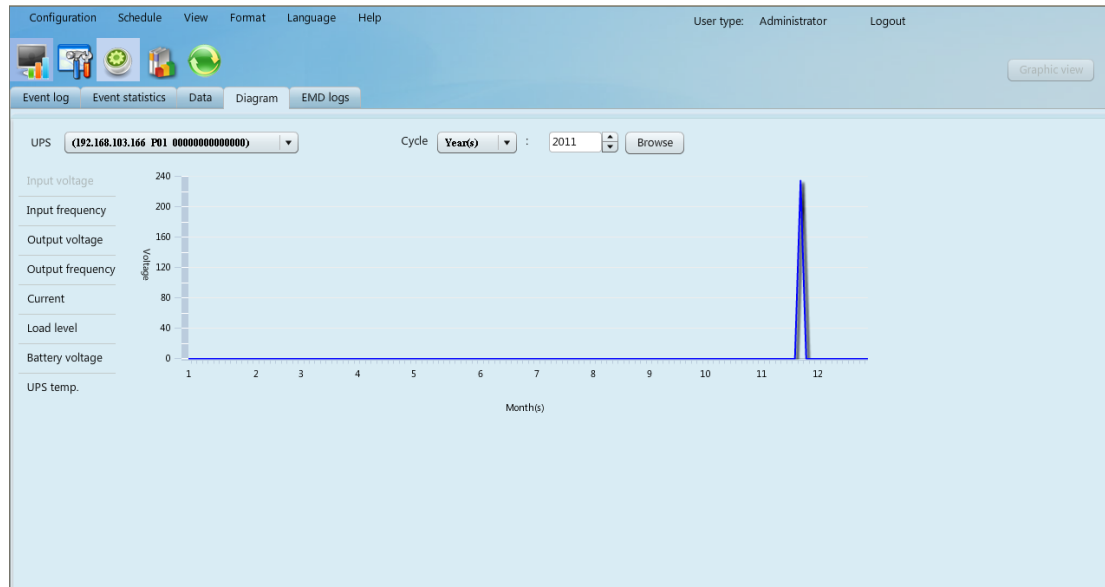


Diagram 5-33

NOTE: This screen may be different for different types of UPSs.

Step 2 Select UPS from com. port list. Users still can retrieve old data saved in the software even though the UPS is no longer connected to local system.


Step 3 Select cycle and period time. Then click "Browse" button to get the diagram.

Step 4 Select monitoring parameters on left-hand tab to switch diagram.

5.3.2.5. EMD Logs

In the EMD logs window, it shows the environment data in figures detected by environmental monitoring device (EMD) during selected period time.

Step 1 Select View >> History >> EMD logs. Refer to Diagram 5-34.

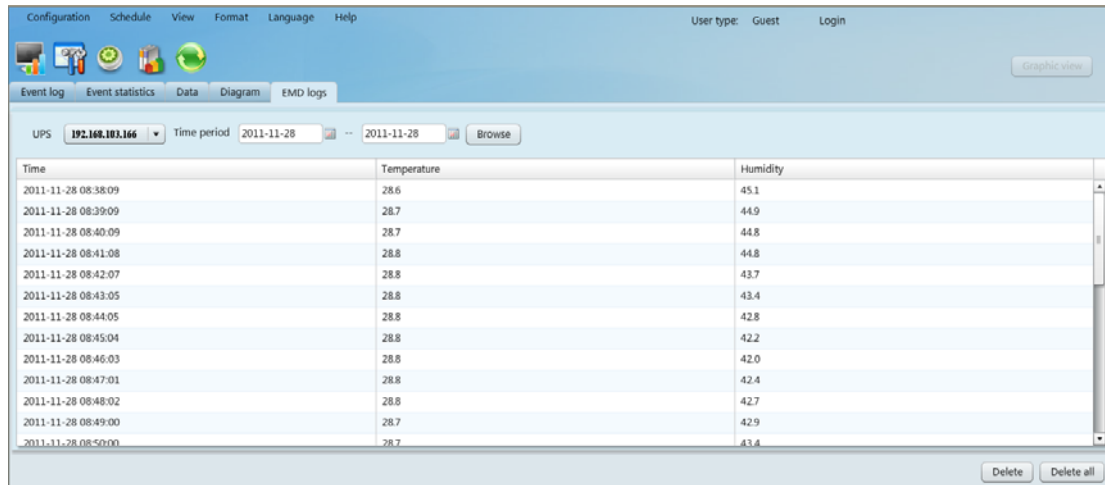

The screenshot shows the 'EMD logs' window. At the top, there are menu items: Configuration, Schedule, View, Format, Language, Help. On the right, it says 'User type: Guest' and 'Login'. Below the menu is a toolbar with icons for Event log, Event statistics, Data, Diagram, and EMD logs. The 'EMD logs' tab is selected. Below the toolbar, there is a section for 'UPS' with a dropdown menu showing '192.168.103.166' and a 'Time period' section with a calendar icon and a 'Browse' button. The main area is a table with three columns: Time, Temperature, and Humidity. The table contains 15 rows of data. At the bottom right, there are 'Delete' and 'Delete all' buttons.

Time	Temperature	Humidity
2011-11-28 08:38:09	28.6	45.1
2011-11-28 08:39:09	28.7	44.9
2011-11-28 08:40:09	28.7	44.8
2011-11-28 08:41:08	28.8	44.8
2011-11-28 08:42:07	28.8	43.7
2011-11-28 08:43:05	28.8	43.4
2011-11-28 08:44:05	28.8	42.8
2011-11-28 08:45:04	28.8	42.2
2011-11-28 08:46:03	28.8	42.0
2011-11-28 08:47:01	28.8	42.4
2011-11-28 08:48:02	28.8	42.7
2011-11-28 08:49:00	28.7	42.9
2011-11-28 08:50:00	28.7	43.4

Diagram 5-34

Step 2 Select UPS and select the starting time and ending time by clicking calendar icon. Then click "Browse" button to get the data table. Delete/Delete all

- "Delete": Select specific data and click "Delete" button to delete the record.
- "Delete all": Click "Delete all" button to delete all records on the listed table.

5.4. Format

5.4.1 Temperature Unit

There are two temperature units for selecting: Centigrade and Fahrenheit. Default setting is centigrade.

5.4.2 Date Format

There are nine formats for date display:

- YYYY-MM-DD, YYYY/MM/DD, YYYY:MM:DD.
- MM-DD-YYYY, MM/DD/YYYY, MM:DD:YYYY.
- DD-MM-YYYY, DD/MM/YYYY, DD:MM:YYYY.

Default setting is YYYY-MM-DD.

5.5. Language

View Power Pro offers thirteen languages for selection:

- English
- French
- German
- Italian
- Polish
- Portuguese
- Russian
- Spanish
- Ukrainian
- Turkish
- Czech
- Chinese(Simplified)
- Chinese(Traditional)

5.6. Help

5.6.1. About

Click "Help" menu and select "About". It represents the information about software.

5.6.2. Online help

Click "Help" menu and select "Online help" item. It will open user manual. Before operating software, please read manual carefully.

SNMP Manager. User Manual.

1. Introduction.

SNMP Manager is a plug-in for ViewPower Pro software. Users can search and operate all SNMP devices in the LAN via this interface. Then, ViewPower Pro will automatically search and monitor these SNMP devices.

2. SNMP Manager Install, Quick Start and Uninstall.

Supported OS:

- Windows 2000
- Windows 2003 / XP / VISTA / 2008(32bit & x64bit)
- Windows 7(32bit & x64bit)
- Red Hat Linux 8 and above
- Red Hat Enterprise AS3 and above
- Suse Linux 10 and above
- Ubuntu 6.10 and above
- Fedora 5 and above
- Red Hat Enterprise Linux AS5
- Linux Desktop: Ubuntu Linux 8.10
- Solaris 8, 9, 10
- Mac 10.6.2(x64bit)

2.1. Software Installation

Install the ViewPower Pro software bundled inside of SNMP agent package.

2.2. Software Quick Start

To launch SNMP Manager, choose "Enable SNMP" by clicking right button of the mouse. Refer to Diagram 2-1.

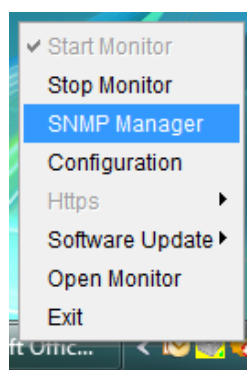


Diagram 2-1

Or, use the Start Menu method; Start >> All Programs >> ViewPower Pro >> SNMP Manager.

2.3. Software Uninstall

Since SNMP Manager is a plug-in of View power Pro software, it's impossible to Uninstall it only.

3. SNMP Manager UGI Interface

The GUI has four sections as marked in the illustration below:

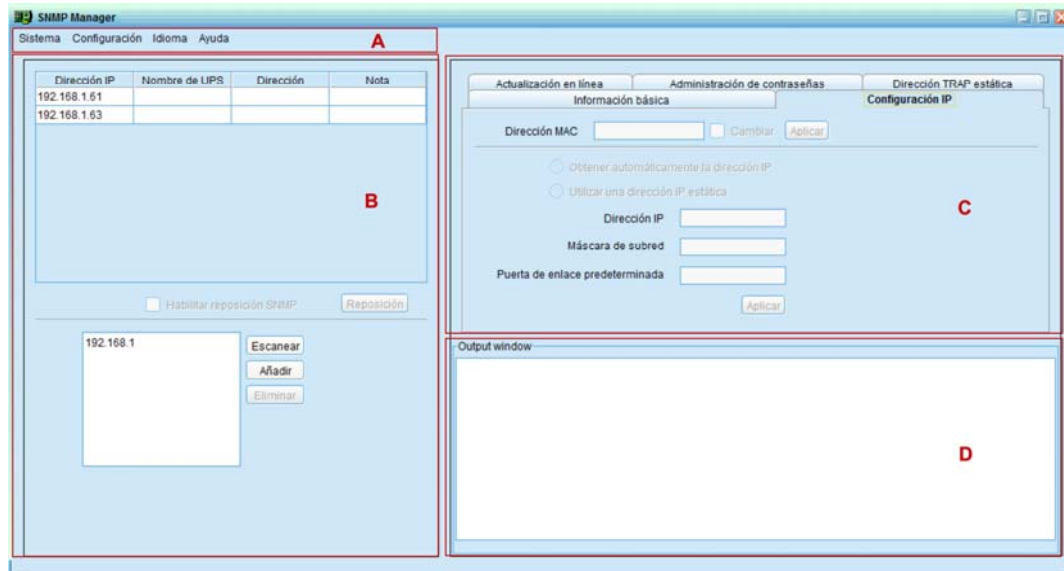


Diagram 3-1

- A. Function menu offers complete toolset for navigating and setting the GUI.
- B. SNMP device list can list down all SNMP devices located in current IP address.
- C. Configuration area includes IP settings, online Upgrade, password management, and static trap address.
- D. Output window displays all messages for Operations

3.1. SNMP Device List

The default value in window list would be current PC IP address. For example, if IP address of current PC is "192.168.102.10", it will display "192.168.102.*" in dropdown list when first enabling SNMP Manager.

3.1.1. Scan

You may enter specific IP address and then click "Scan" button to search.

3.1.2. Add IP Address

Click "Add" button and it will pop up a window to ask for entering specific IP address. Then, click "Apply" button to add IP address (Subnet). Refer to Diagram 3-2.

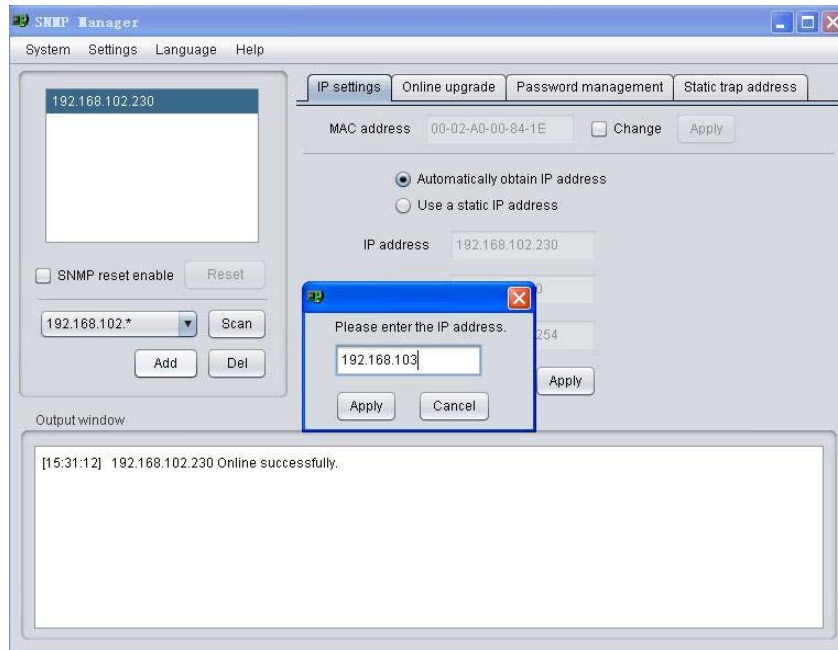


Diagram 3-2

3.1.3. Delete IP Address

Select unnecessary IP address from list and click "Del" button to delete from list.

3.1.4. Reset

If it requires restarting the device IP addresses, please select the "SNMP reset enable" and click on the "Reset" button, then confirm the login, you can restart the device. Steps are as follows:

Step 1: Selected from the IP list of equipment needed to restart IP. At this point, "SNMP reset enable" will be checked into. Refer to Diagram 3-3.

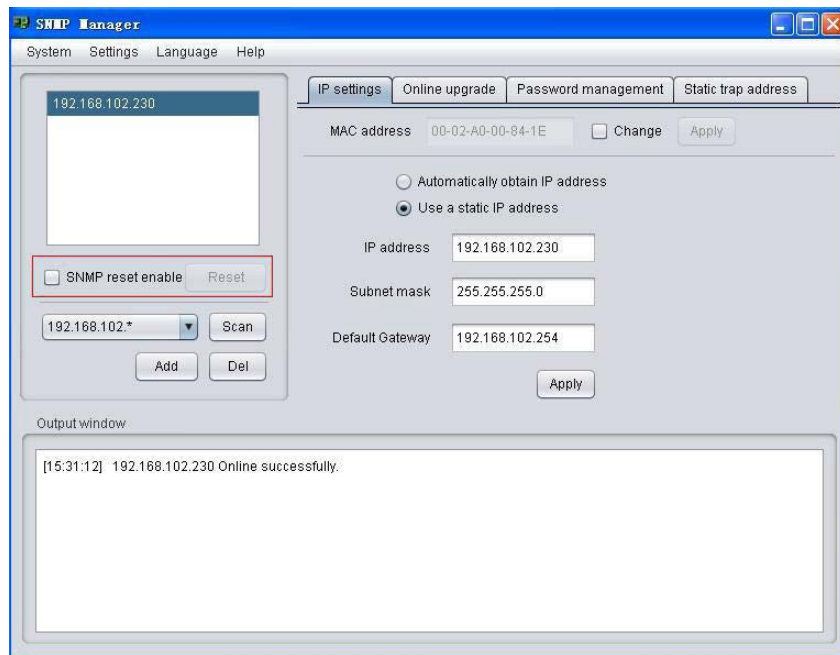


Diagram 3-3

Step 2: Check the "SNMP reset enable". Then "Reset" button will become available Click. Refer to Diagram 3-4

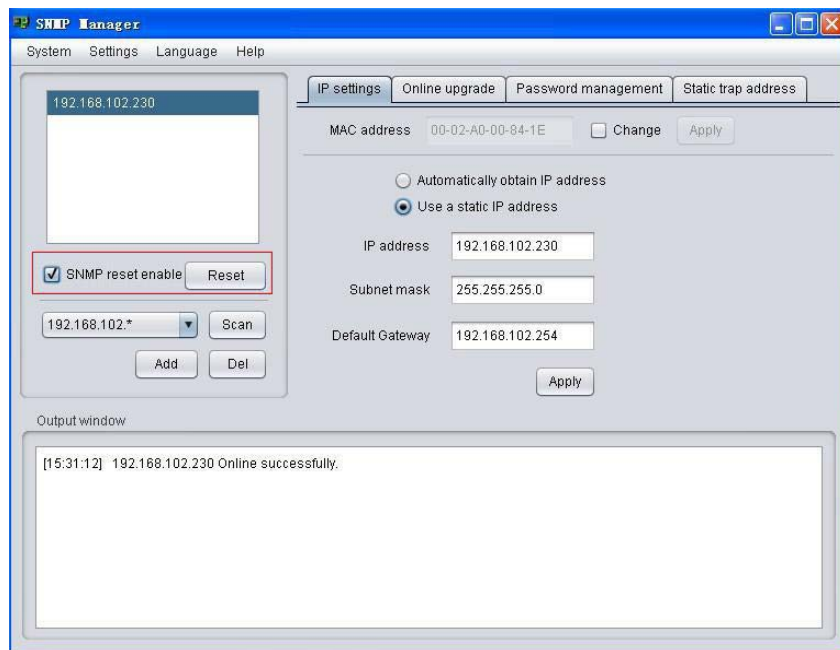


Diagram 3-4

Step 3: Click the "Reset" button, and then prompts the user to confirm the operation. Refer to Diagram 3-5.

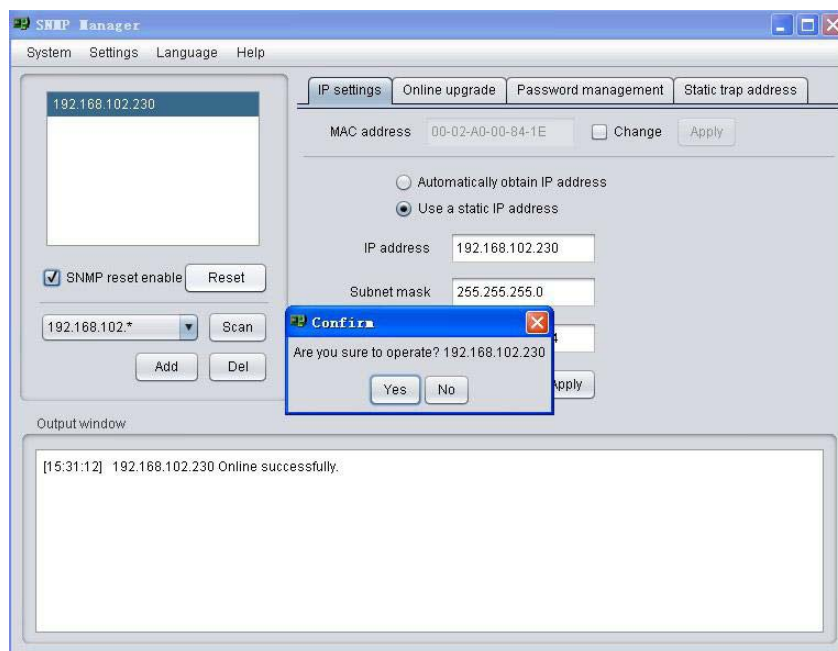


Diagram 3-5

Step 4: Select "Yes", you will be prompted to log in, select "No", the suspension of operation. Refer to Diagram 3-6.

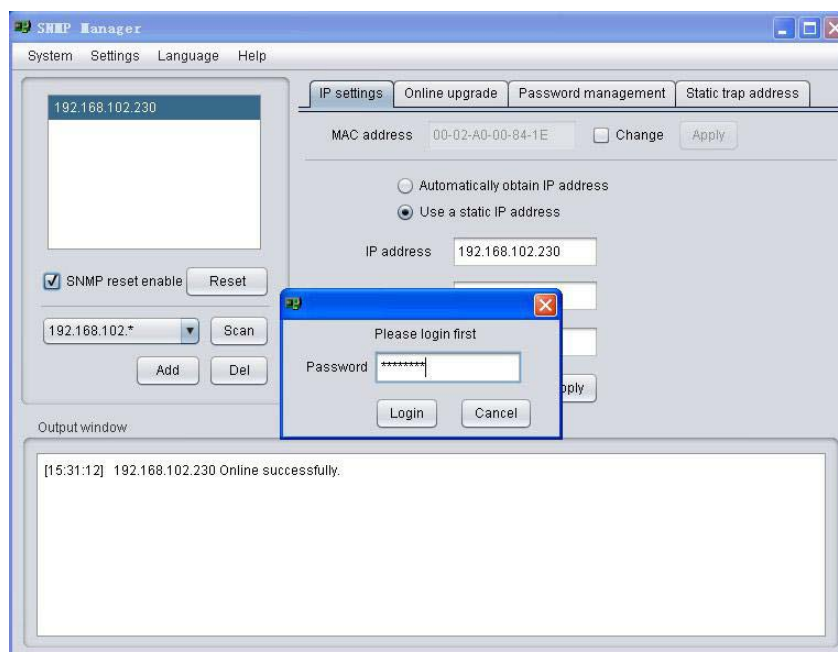


Diagram 3-6

Step 5: Enter the correct password, and then click "Login" button, the target device will be restarted.

NOTE: If before you reboot, change the current device MAC address, and the current device is the use of HCP (Automatically obtain IP address), then reboot, you need to manually click on "Scan" button to scan.

4. SNMP Manager Function Menu

4.1. System

4.1.1. Login

When remote login to access SNMP devices, it's necessary to verify ID. The default password is "12345678".

Step 1: Select System >> Login

Step 2: Enter default password and then click "Login" button. Or click "Cancel" to cancel login.

Refer to Diagram 4-1.

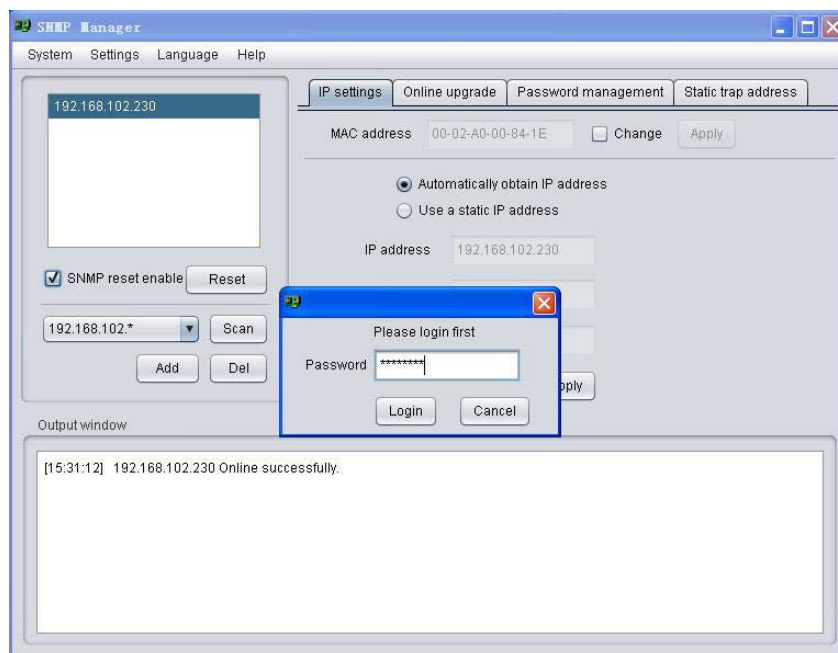


Diagram 4-1

4.1.2. Logout

Clear all currently saved passwords.

4.1.3. Quit

Select "Quick" to exit SNMP Manager.

4.2. Settings

4.2.1. IP Setting

Part 1: Change MAC address

Step 1: IP list, select from the need to modify the MAC address of the device, then "Change" will be checked into, Refer to Diagram 4-2.

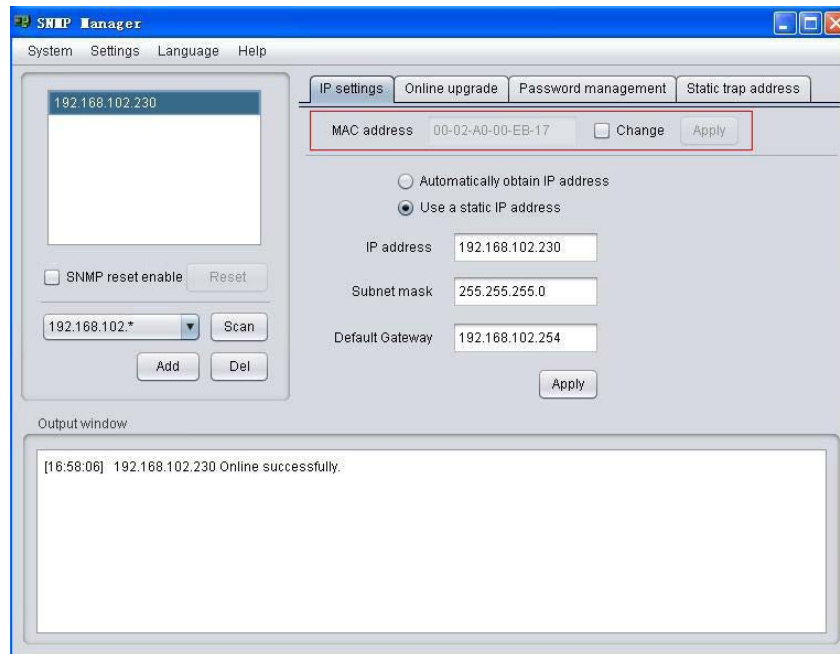


Diagram 4-2

Step 2: Check the "Change", then enter the MAC address can be entered into a box, "Apply" button will become clickable, Refer to Diagram 4-3.

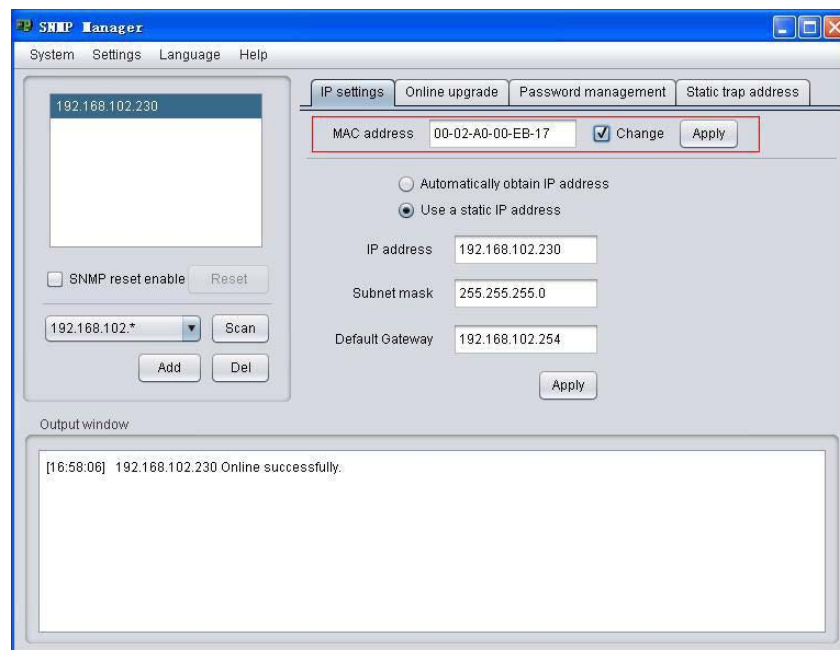


Diagram 4-3

Step 3: After modifying MAC address, click "Apply" button, then the user is prompted to confirm the operation, Refer to Diagram 4-4.

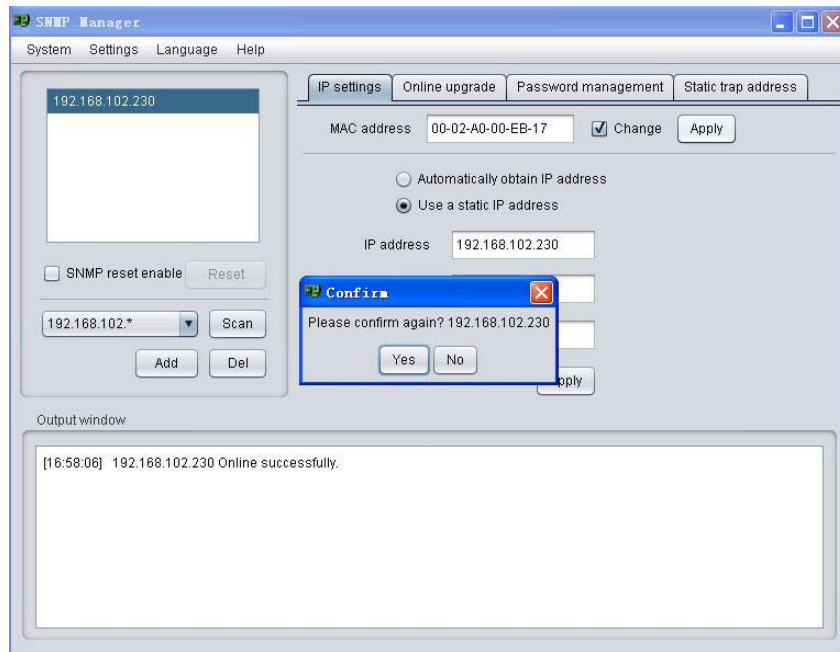


Diagram 4-4

Step 4: Confirm the operation; it will prompt "Operation success". Refer to Diagram 4-5.

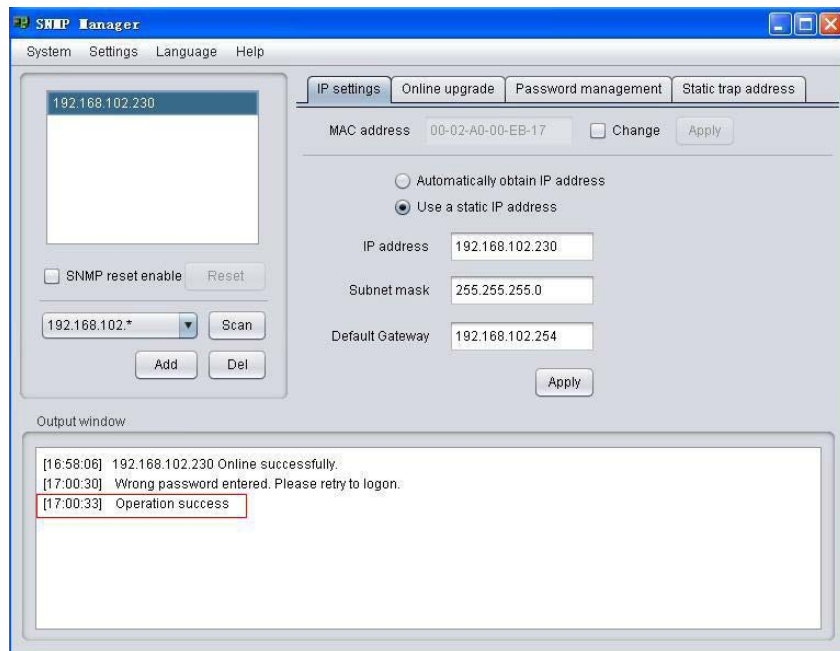


Diagram 4-5

Part 2: There are two methods to obtain IP address:

- Automatically obtain IP address (DHCP)
- Manually configure IP address.

The system will default automatically obtain IP addresses. If there is no this kind of service provided in LAN, the default IP will display as "192.168.102.230", Net mask as "255.255.255.0" and default gateway as "0.0.0.0". Refer to Diagram 4-6.

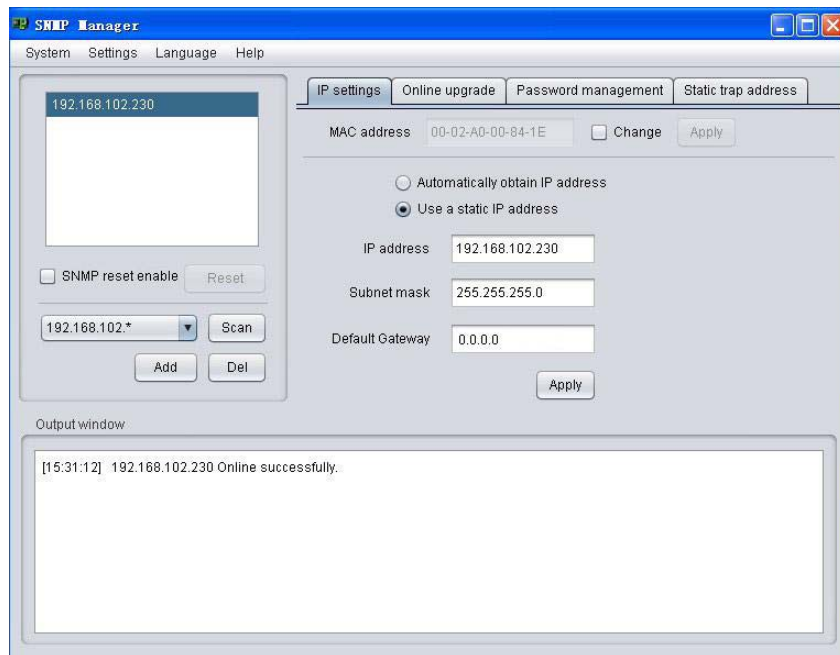


Diagram 4-6

4.2.2. Online upgrade

There are three methods for online upgrade:

- Upgrade the selected devices: It will upgrade all SNMP devices listed on the window.
- Upgrade all un-upgraded devices: It will only upgrade SNMP devices which are not using the same version as current SNMP device is.
- Force to upgrade all devices: No matter what kinds of version are used for SNMP devices listed in the window list, it will upgrade to the version used for current SNMP device. Refer to Diagram 4-7.

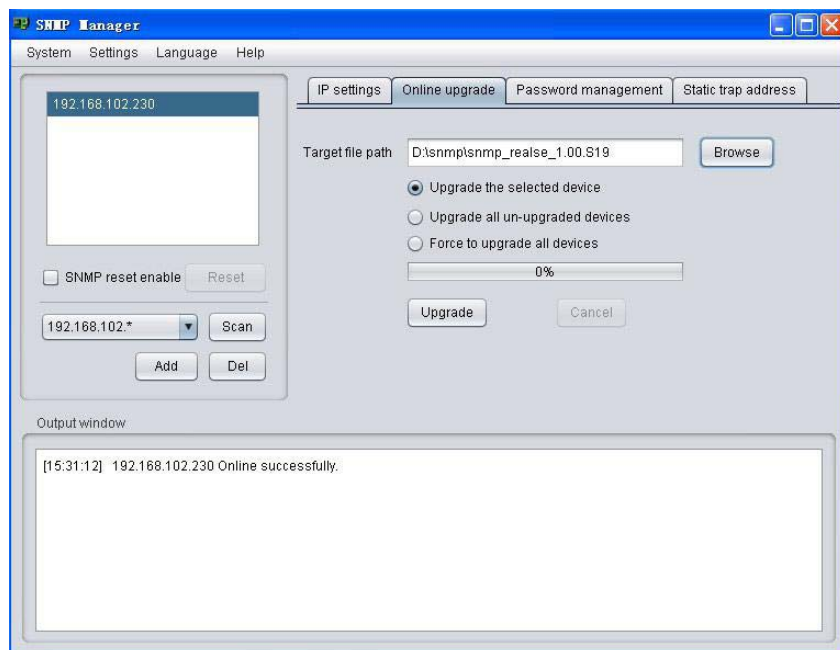


Diagram 4-7

Step 1: Click "Browse" button to choose program file. Refer to Diagram 4-8.

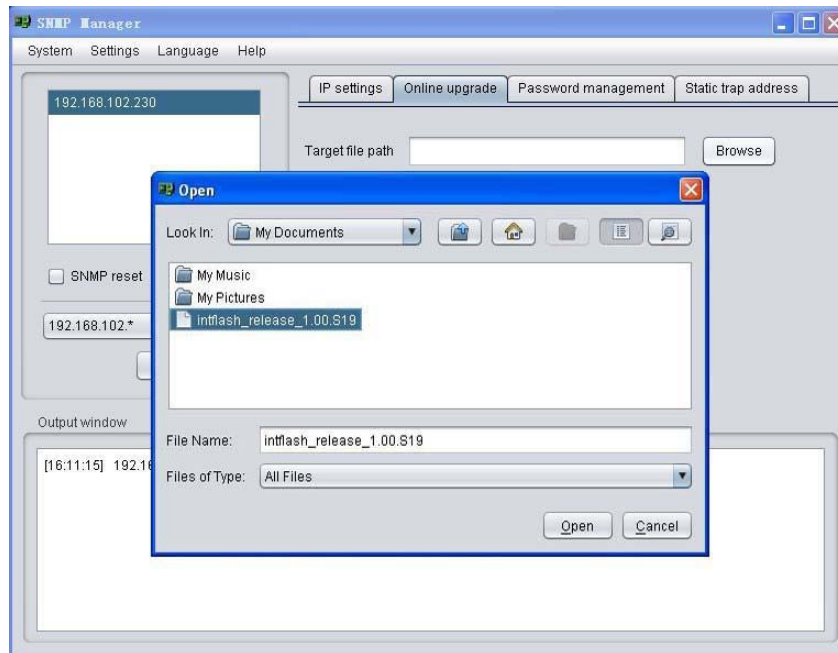


Diagram 4-8

Step 2: Click "Upgrade" button to execute upgrade action.

Step 3: When upgrade is complete, you may check the message in output window.

NOTE: If abnormal situation occurs during upgrade process, the system will automatically restart the upgrade operation. If this interruption occurs five times, then system will automatically stop this operation. At this time, please check if LAN is working fine or not.

4.2.3. Password management

You may modify single password for one SNMP device or all passwords for all SNMP devices.

Refer to Diagram 4-9.

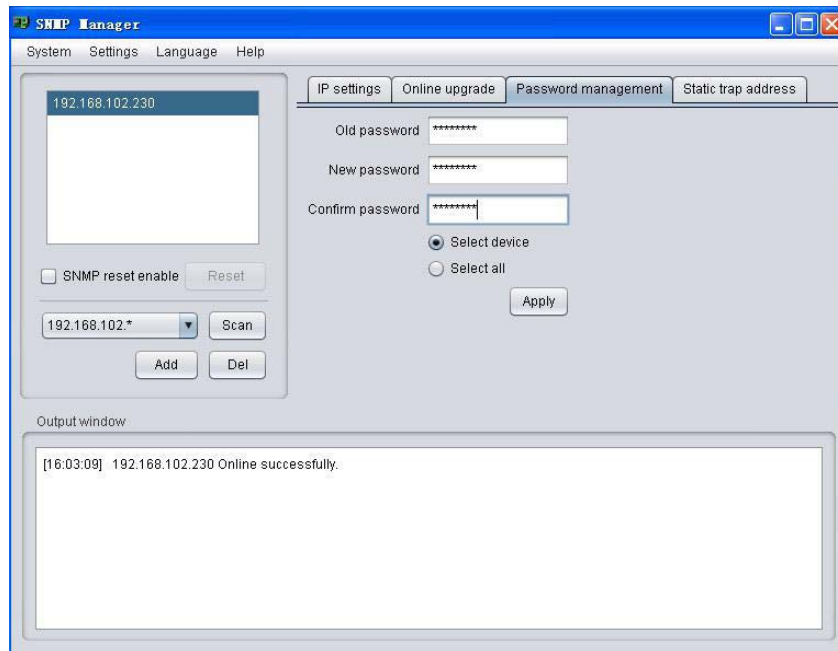


Diagram 4-9

- **Select Device:** Choose to change password for selected SNMP device on the window list.
- **Select all:** Choose to change passwords for all SNMP devices on the window list.
- **Operation step:** Enter original password, new password, and reenter new password to confirm. Then click "Apply" button to complete password change.

NOTE: The length of password is 8~15 digits, if the password modifies operation for all SNMP devices, all SNMP devices password must be consistent.

4.2.4. Static trap address

You may configure two static trap addresses in SNMP Manager. Refer to Diagram 4-10.

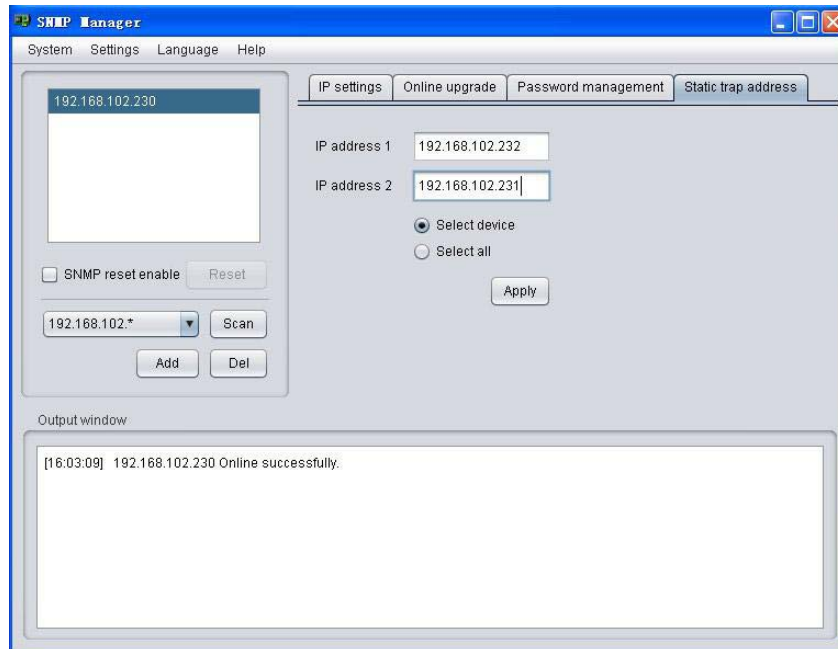


Diagram 4-10

NOTE: The SNMP device could provide 2 static trap addresses and 8 dynamic trap addresses. The SNMP device will automatically load the IP address of host machine which installed monitoring software as dynamic trap address. If there are over 10 minutes inactive for the dynamic trap address, then the SNMP device will automatically release it for to load new dynamic trap.

5. Language

SNMP Manager offers 10 languages:

- Chinese (Simplified)
- Chinese (Traditional)
- English
- German
- Italian
- Polish
- Portuguese
- Russian
- Spanish
- Turkish
- Ukrainian
- French

The default language setting would be English.

6. Help

- About: Click "Help" menu and select "About" item. It represents the copyright information about software
- Help: Click "Help" menu and select "System help" item. It will open the help manual. Before operating software, please read manual carefully.